

INSTALLATION INSTRUCTIONS

TR, Designer Series Room Temp Sensor



IMPORTANT WARNINGS


- Only qualified trade installers should install this product
- This product is not intended for life-safety applications
- Do not install in hazardous or classified locations
- The installer is responsible for all applicable codes

INSTALLATION

1. IMPORTANT! Locate sensor in an area away from ventilation sources and heat generating equipment and appliances. Sensor should be mounted at light switch height in a vertical orientation. Use insulating material behind sensor to ensure reading accuracy.

NOTE: Do not install sensor in multi-gang electrical boxes with line voltage or other electrical devices.


2. Wire sensor as shown for thermistor and optional slider and override button.

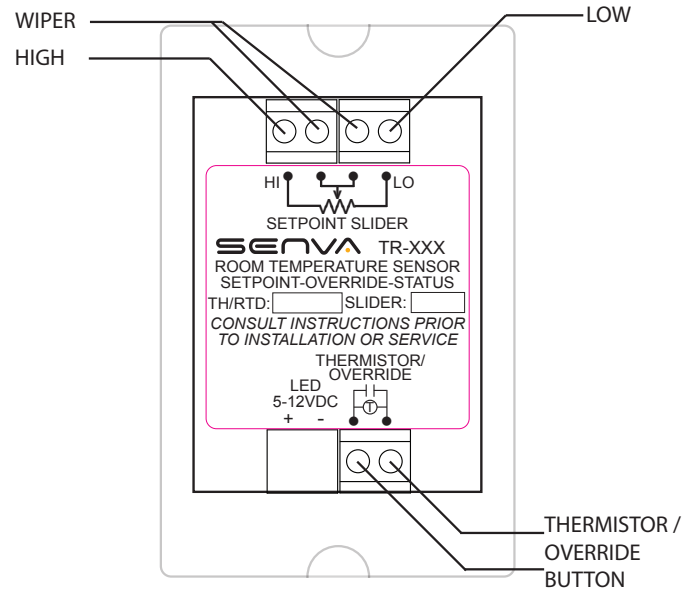

3. Install insulation in junction box, then install base plate and sensor assembly. Sensor must be installed in the orientation shown.

4. Snap on decorative cover to complete installation.

NOTE: Optional trim ring for surface mount applications or mis-sized J-boxes

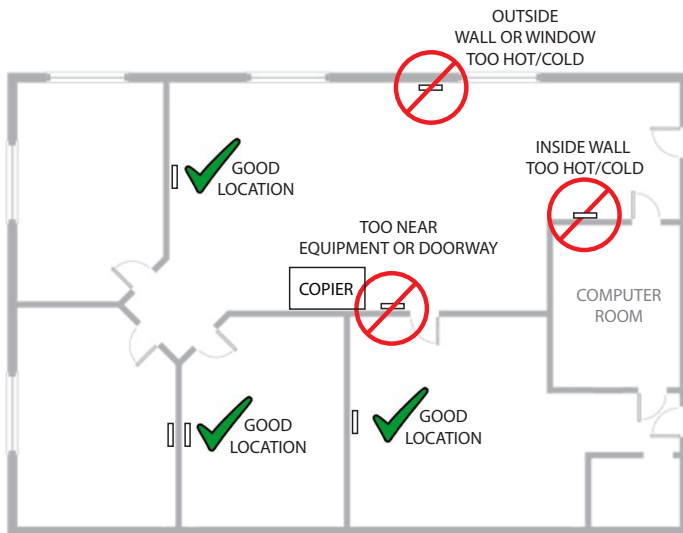

PRODUCT APPLICATION LIMITATION:

Senva products are not designed for life or safety applications. Senva products are not intended for use in critical applications such as nuclear facilities, human implantable device or life support. Senva is not liable, in whole or in part, for any claims or damages arising from such uses.

TROUBLESHOOTING

Symptom	Solution
No output	Check wiring.
Slider reading in reverse	Move wire from High to Low or vice versa.