

---

# BACnet Protocol Guide

## EM-RS485

---

***Senva Sensors***  
***9290 SW Nimbus Ave***  
***Beaverton, OR 97008***



**154-0022-0E**

Rev.	Release Date	By	Description of Change	ECR
0A	11/22/2016	DLE	Initial Release	---
0B	4/11/2017	DLE	Updated for firmware v1.1.2	---
0C	3/21/2018	DLE	Updated for firmware v1.1.3	---
0D	5/29/2018	DLE	Updated RS485 terminal polarity, firmware v1.1.4	---
0E	7/17/19	DPK	Updated firmware for reduced point map	---

Copyright ©2019. All rights reserved. This document contains Senva Sensors proprietary information, and may not be reproduced or distributed without written permission.

# Table of Contents

---

<b>Access</b>	Readable.....	R	
<b>Legend</b>	Writable .....	W	
	Writable with 0 only (statistics reset, see <a href="#">Analog Inputs</a> ).....	W0	
	Saved in non-volatile configuration memory.....	NV	
<b>Protocol Implementation Conformance Statement.....</b>			<b>6</b>
<b>Configuration.....</b>			<b>7</b>
<b>Device.....</b>			<b>9</b>
<b>Accumulators (Pulse Input) .....</b>			<b>10</b>
	ACC210 Pulse Input 1.....	R/NV.....	10
	ACC220 Pulse Input 2 .....	R/NV.....	10
<b>Accumulators (Energy) .....</b>			<b>12</b>
	System.....		13
	ACC700 Total Real Energy (ACC).....	R/NV.....	13
	ACC720 System Real Energy (ACC) .....	R/NV.....	13
	ACC740 Total Reactive Energy (ACC) .....	R/NV.....	14
	ACC760 Total Apparent Energy (ACC) .....	R/NV.....	14
	R Phase.....		14
	ACC1700 Total R Phase Real Energy (ACC) .....	R/NV.....	14
	ACC1740 Total R Phase Reactive Energy (ACC) .....	R/NV.....	15
	ACC1760 Total R Phase Apparent Energy (ACC) .....	R/NV.....	15
	S Phase.....		15
	ACC2000 – ACC2999.....		15
	T Phase.....		15
	ACC3000 – ACC3999.....		15
<b>Analog Inputs.....</b>			<b>16</b>
	General.....		17
	AI310 Temperature .....	R/W0.....	17
	AI380 Power Supply Voltage .....	R/W0.....	17
	System.....		17
	AI410 Line Frequency .....	R/W0.....	17
	AI420 Phase Average RMS Voltage .....	R/W0.....	17
	AI450 Phase to Phase Average RMS Voltage .....	R/W0.....	18
	AI520 Phase Average RMS Current .....	R/W0.....	18
	AI540 Phase Average Current Angle .....	R/W0.....	18
	AI550 System Power Factor .....	R/W0.....	19
	AI600 Total Real Power .....	R/W0.....	19
	AI610 Phase Average Real Power .....	R/W0.....	19
	AI620 Net Real Power .....	R/W0.....	19
	AI640 Total Reactive Power .....	R/W0.....	19
	AI650 Phase Average Reactive Power .....	R/W0.....	20

AI660	Total Apparent Power .....	R/W0.....	20
AI670	Phase Average Apparent Power .....	R/W0.....	20
AI700	Total Real Energy (AI).....	R/NV.....	20
AI720	System Real Energy (AI) .....	R/NV.....	20
AI740	Total Reactive Energy (AI) .....	R/NV.....	20
AI760	Total Apparent Energy (AI) .....	R/NV.....	20
AI800	Demand Total Real Power .....	R/W0/NV.....	20
AI820	Demand Net Real Power .....	R/W0/NV.....	20
AI840	Demand Total Reactive Power .....	R/W0/NV.....	21
AI860	Demand Total Apparent Power .....	R/W0/NV.....	21
R Phase.....			21
AI1420	R Phase RMS Voltage .....	R/W0.....	21
AI1440	R to S Phase Voltage Angle .....	R/W0.....	21
AI1450	R to S Phase RMS Voltage .....	R/W0.....	22
AI1520	RMS Current .....	R/W0.....	23
AI1540	Current Angle .....	R/W0.....	23
AI1550	Power Factor .....	R/W0.....	24
AI1600	Real Power .....	R/W0.....	24
AI1640	Reactive Power .....	R/W0.....	24
AI1660	Apparent Power .....	R/W0.....	25
AI1700	Total Real Energy (AI) .....	R/NV.....	25
AI1740	Total Reactive Energy (AI) .....	R/NV.....	25
AI1760	Total Apparent Energy (AI) .....	R/NV.....	25
AI1800	Demand Real Power .....	R/W0/NV.....	25
AI1840	Demand Reactive Power .....	R/W0/NV.....	26
AI1860	Demand Apparent Power .....	R/W0/NV.....	26
S Phase.....			27
AI2000 – AI2999.....			27
T Phase.....			27
AI3000 – AI3999.....			27
<b>Analog Values .....</b>			<b>28</b>
System.....			28
AV103	Reset Count .....	R/NV.....	28
AV104	Up Time .....	R.....	28
AV123	MAC Address .....	R/W/NV.....	28
AV124	RS485 Baud Rate .....	R/W/NV.....	29
AV134	Smoothed Temperature Response Time .....	R/W/NV.....	29
AV142	Smoothed Frequency Response Time .....	R/W/NV.....	29
AV144	Smoothed Voltage Response Time .....	R/W/NV.....	29
AV154	Smoothed Current Response Time .....	R/W/NV.....	30
AV164	Smoothed Power Response Time .....	R/W/NV.....	30
AV174	Energy Timestamp .....	R.....	30
AV182	Demand Synchronization Hour .....	R/W/NV.....	30
AV183	Demand Window Time .....	R/W/NV.....	30
AV184	Elapsed Demand Window .....	R/W0.....	30

AV186	Demand Window Count .....	R/NV.....	31
AV190	Configuration Reset .....	W.....	31
AV192	Statistics Reset .....	W.....	31
AV194	Energy Reset Count .....	R/NV.....	31
AV208	Pulse Input Debounce Time .....	R/W/NV.....	32
AV242	PowerPrint Frequency .....	R/W/NV.....	32
AV244	PowerPrint Frequency Tolerance .....	R/W/NV.....	32
AV246	PowerPrint Voltage Tolerance .....	R/W/NV.....	32
AV248	PowerPrint Voltage Angle Tolerance .....	R/W/NV.....	32
AV400	Active Conditions .....	R.....	33
AV401	Previous Conditions.....	R/W0.....	33
R Phase.....			33
AV1140	Voltage Rating.....	R.....	33
AV1142	Voltage Multiplier.....	R/W/NV.....	33
AV1144	PowerPrint Voltage.....	R/W/NV.....	34
AV1146	PowerPrint Voltage Angle.....	R/W/NV.....	34
AV1150	Current Rating.....	R.....	34
AV1152	Current Multiplier.....	R/W/NV.....	34
AV1162	Power Multiplier.....	R/W/NV.....	35
AV1192	Statistics Reset.....	W.....	35
AV1400	Active Conditions .....	R.....	36
AV1401	Previous Conditions.....	R/W0.....	36
S Phase.....			36
AV2000 – AV2999.....			36
T Phase.....			36
AV3000 – AV3999.....			36
<b>Binary Inputs.....</b>			<b>37</b>
BI200	Setup Button.....	R.....	37
BI201	Binary Input 1.....	R.....	37
BI202	Binary Input 2.....	R.....	37
<b>Binary Values .....</b>			<b>38</b>
System.....			38
BV111	Identify Meter .....	R/W.....	38
BV112	Auto Protocol .....	R/W/NV.....	38
BV113	Auto MAC Address .....	R/W/NV.....	39
BV114	Auto Baud Rate .....	R/W/NV.....	39
BV116	Auto Parity .....	R/W/NV.....	39
BV195	Auto Reset Statistics .....	R/W/NV.....	39
BV197	Simple Mode .....	R/W/NV.....	39
BV240	PowerPrint Alarm.....	R.....	39
BV241	PowerPrint .....	R/W/NV.....	40
R Phase.....			40
BV1102	CVT Present.....	R.....	40
BV1161	Power Multiplier Override.....	R/W/NV.....	40



S Phase.....	40
BV2000 – BV2999.....	40
T Phase.....	41
BV3000 – BV3999.....	41
<b>Multi State Values.....</b>	<b>42</b>
System.....	42
MSV122 RS485 Protocol .....	R/W/NV 42
MSV126 RS485 Parity .....	R/W/NV 42
MSV133 Temperature Units .....	R/W/NV 43
MSV152 System Current Sensor Technology.....	R 43
MSV153 Angle Units .....	R/W/NV 43
MSV161 System Phase Selection .....	R/W/NV 43
MSV162 Power Spectrum.....	R/W/NV 44
MSV163 Power Units .....	R/W/NV 44
MSV173 Energy Units .....	R/W/NV 44
MSV181 Demand Synchronization Mode .....	R/W/NV 45
R Phase.....	46
MSV1103 CVT Status.....	R 46
MSV1104 PowerPrint Identity Status .....	R/W/NV 46
MSV1154 Current Sensor Technology.....	R 46
S Phase.....	47
MSV2000 – MSV2999.....	47
T Phase.....	47
MSV3000 – MSV3999.....	47
<b>Character String Values.....</b>	<b>48</b>
R Phase.....	48
CH1010 CVT Serial Number.....	R 48
CH1020 CVT Model.....	R 48
S Phase.....	48
CH2000 – CH2999 .....	48
T Phase.....	48
CH3000 – CH3999 .....	48
<b>Files.....</b>	<b>49</b>
F25000 User Configuration.....	R 49
<b>Appendix A: Condition Flags Decoding .....</b>	<b>50</b>
<b>Appendix B: Simple Mode Point List.....</b>	<b>51</b>

#### See Also:


152-0291	<i>EM-RS485 Installation Instructions</i>
154-0023	<i>EM-RS485 Modbus Protocol Guide</i>

# Protocol Implementation Conformance Statement

---

<b>Date</b>	Tuesday, May 29, 2018
<b>Vendor Name</b>	Senva Sensors
<b>Product Name</b>	EM
<b>Product Model Number</b>	EM-RS485
<b>Firmware Revision</b>	1.1.4
<b>Application Software Version</b>	May 29 2018, 07:52:59
<b>BACnet Protocol Revision</b>	14
<b>Product Description</b>	3 Phase Energy Meter
<b>BACnet Standardized Device Profile</b>	BACnet Application Specific Controller (B-ASC)
<b>List of BACnet Interoperability Building Blocks Supported</b>	DS-RP-B, DS-RPM-B, DS-WP-B, DS-WPM-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-TS-B, DM-RD-B
<b>Segmentation Capability</b>	No Support
<b>Standard Object Types Supported</b>	See following. Optional implementations are <b>marked</b> .
<b>Data Link Layer Options</b>	MS/TP Master, MS/TP Slave (9600 – 115200)
<b>Device Address Binding</b>	No Support
<b>Networking Options</b>	No Support
<b>Character Sets Supported</b>	ISO 10646 (UTF-8)
<b>Communications Gateway</b>	No Support
<b>Network Security Options</b>	Non-Secure Device

# Configuration

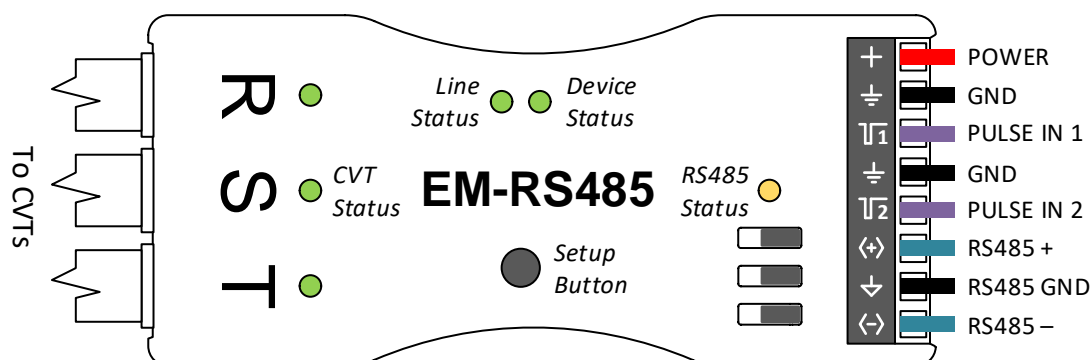

✓ Get In

✓ Get Out

→ Get Data


Congratulations on installing your new Senva EM-RS485 energy meter! This *BACnet Protocol Guide* assumes the first stage of installation is complete, with the meter and any CVTs connected and powered. A green *Device Status* indicates the meter is powered and ready. If not, refer to the separate *Installation Instructions* before continuing. Now, only the network configuration remains between you and the data.

Leave the meter in the default factory mode for automatic network configuration:

- Automatic *Baud Rate* detection (see [BV114](#), [AV124](#)): 9600 – 115200 baud
- Automatic *Protocol* detection (see [BV112](#), [MSV122](#)): BACnet
- Automatic *MAC Address* selection (see [BV113](#), [AV123](#)): 0 – 127

To begin automatic configuration, simply connect the RS485 terminals to an active MS/TP network. An active MS/TP network consists of at least one MS/TP master device (typically a gateway or controller).

Once connected, the meter observes RS485 activity to learn *Baud Rate*, *Protocol*, and *MAC Address*. Without activity, the meter cannot learn! The meter will not interfere with existing network traffic during the observation phase. As configuration proceeds, the *RS485 Status* LED indicates progress with a combination of color and blinking activity patterns. Diagnostic mode conditions can help identify the current auto configuration step (see Figure 1, and also the *Installation Instructions*).

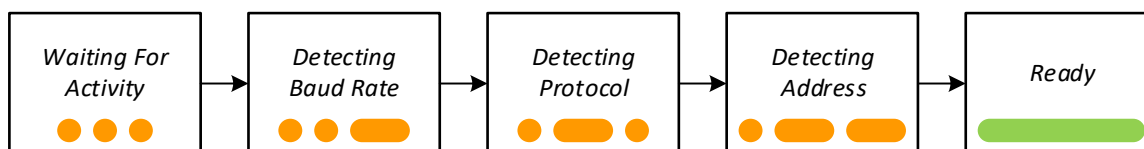

**Figure 1: Automatic Configuration Conditions**

In the *Detecting Protocol* phase of automatic configuration, the meter also detects serial format, comprising the number of *Data Bits*, *Parity*, and number of *Stop Bits*. The BACnet standard specifies a fixed format of 8 bits, no parity, and 1 bit respectively. The meter does not support configuration of *Data Bits* or *Stop Bits* as the nature of BACnet itself effectively precludes useful alternatives. However, for compatibility with non-conforming implementations the meter does support *Parity* configuration (see [MSV126](#)).

In the *Detecting Address* phase of automatic configuration, the meter selects a *MAC Address* from a pool of unused addresses detected on the MS/TP local network. Candidate addresses are added to the pool after two successive *Poll-For-Master* requests time out with no reply. A meter typically needs 15 – 30 seconds to identify candidates (somewhat longer if many new meters are connected at once).


To reduce collisions with other devices that may be also selecting an automatic *MAC Address*, the final address selection includes a small random component. However, the random component is strongly biased towards lower addresses (to keep the token ring efficiency high). Also, the meter makes two tests to confirm that the candidate address is really unused:

- The first test confirms that two devices have not simultaneously selected the same *MAC Address*.
- The second test confirms that there is no MS/TP slave device occupying the selected *MAC Address*. (A slave device would not naturally respond to the *Poll-For-Master* requests).

If either test fails, the meter abandons the selected address and resumes observation. If there appears to be no unused addresses, the meter will observe indefinitely. This may occur for a few reasons:

- There is no MS/TP master device generating *Poll-For-Master* requests.
- All MS/TP master addresses 0 – 127 are already assigned to other devices.
- The *Max Master* property has been set smaller than 127, and all MAC addresses from 0 – *Max Master* are already assigned to other devices.

The *RS485 Status* LED turns green after auto configuration completes. Assuming no conflicts, a BACnet controller can then discover the meter to query or configure the various objects. To differentiate between multiple discovered meters, check the last three digits of the unique serial number printed on the label. The meter sets the default *Device ID* by adding “665000” to the last three digits of the serial number.

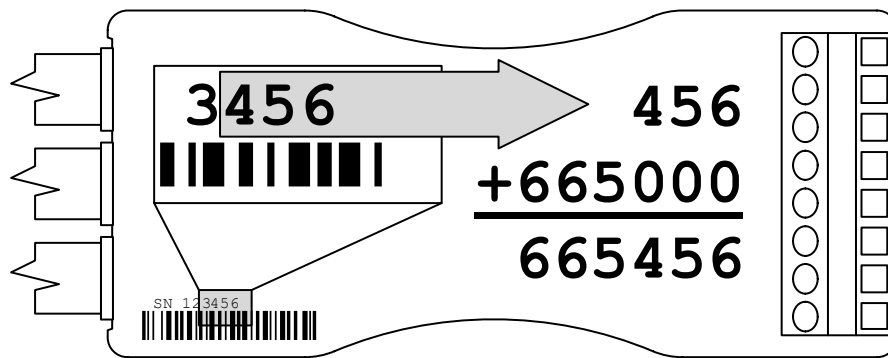

**Figure 2: Default Device ID**

The meter stores any discovered automatic configuration result in non-volatile memory and reloads them whenever the meter resets (e.g. after power loss). The automatic configuration (including *MAC Address*) can be cleared by pressing the *Setup Button* while resetting the meter (e.g. removing and reapplying power). User-configured parameters will not be affected, but the meter must redetect missing parameters before reestablishing communication with the controller.

**WARNING:** Before moving a meter with an automatically selected *MAC Address* to a new network, ensure there will be no conflicts! If necessary, reset the automatic configuration or set a new address manually.

For permanent installations, the protocol configuration parameters (see [AV123](#), [AV124](#), [MSV126](#)) may be set to lock the baud rate, serial format, and protocol. However, this will prevent the meter from adapting to future changes in the network environment.

# Device

---

• Object Identifier	<b>W</b>	Default: 665XXX (see <a href="#">Configuration</a> )
• Object Name	<b>W</b>	30 characters maximum
• Object Type	R	
• System Status	R	
• Vendor Name	R	
• Vendor Identifier	R	
• Model Name	R	
• Firmware Revision	R	
• Application Software Version	R	
• <b>Location</b>	<b>W</b>	30 characters maximum
• <b>Description</b>	<b>W</b>	30 characters maximum
• Protocol Version	R	
• Protocol Revision	R	
• Protocol Services Supported	R	
• Protocol Object Types Supported	R	
• Object List	R	Too large to be read with a single <i>Read-Property</i> request; must be read element by element
• Max APDU Length Accepted	R	
• Segmentation Supported	R	
• APDU Timeout	R	
• Number of APDU Retries	R	
• <b>Max Master</b>	<b>W</b>	1 – 127; see <a href="#">AV123</a>
• <b>Max Info Frames</b>	<b>W</b>	0 – 255; see <a href="#">AV123</a>
• Device Address Binding	R	
• Database Revision	R	
• <b>Serial Number</b>	<b>R</b>	Matches the serial number printed on the label
• <b>Last Restart Reason</b>	<b>R</b>	
• <b>Time of Device Restart</b>	<b>R</b>	
• <b>Local Date</b>	<b>R</b>	Volatile; must be set via <i>Time-Synchronization</i>
• <b>Local Time</b>	<b>R</b>	Volatile; must be set via <i>Time-Synchronization</i>
• Property List	R	
• <b>Device Features</b>	<b>R</b>	Proprietary property ID 6650
This read-only property, of type <i>Bit String</i> , enumerates various the hardware features of a meter. Each '1' represents a feature that is present.		
1. <i>RS485</i> (always present)		4. <i>Internal Thermistor</i>
2. <i>Pulse Outputs</i>		5. <i>Setup Button</i>
3. <i>Pulse Inputs</i>		

# Accumulators (Pulse Input)

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Status Flags	R	
• Event State	R	Always <i>Normal</i>
• <b>Reliability</b>	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Out of Service	<b>W</b>	
• Units of Measure	<b>W</b>	
• Maximum Present Value	<b>W</b>	Default 4294967295 ( $2^{32} - 1$ )
• Scale	<b>W</b>	
• <b>Pre-Scale</b>	<b>W</b>	
• <b>Value Change Time</b>	<b>R</b>	Only valid if the system time is valid
• <b>Value Before Change</b>	<b>R</b>	
• <b>Value Set</b>	<b>W</b>	
• Property List	R	

## ACC210 Pulse Input 1

R/NV


## ACC220 Pulse Input 2

R/NV

Returns the count of pulses received at the respective pulse terminal (see *Installation Instructions*).

**NOTE:** The corresponding *Binary Inputs* ([BI201](#)/[BI202](#)) track the instantaneous state of the terminal.

Each count in the *Present Value* represents a pair of input edges (active low), registered on the leading (falling) edge. At each transition, the input delays by the *Debounce Time* (see [AV208](#)).

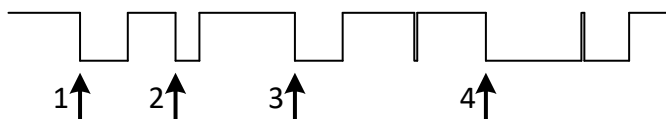

**Figure 3: Pulse Input Counting**

The *Present Value* will count to the *Maximum Present Value* before overflowing to 0. If setting the *Maximum Present Value* smaller than the *Present Value*, the *Present Value* does not update until the next pulse input event.

The *Pre-Scale* property may be configured to convert an input pulse stream to a suitable scale or engineering unit. The *Pre-Scale* factor consists of a pair of integer coefficients *N* and *M*:

$$C_{PV} = \frac{N}{M} \times C_{IN}$$

where:

$C_{PV}$	=	final count stored in the <i>Present Value</i>
$C_{IN}$	=	raw count detected at the pulse input terminal

Integer coefficients permit exact (lossless) conversion, following the algorithm prescribed in the BACnet standard. *N* and *M* must be positive integers less than or equal to 65535 ( $2^{32} - 1$ ).

Many common floating point factors can be expressed as a ratio of two integers. For efficiency, consider reducing scaling factors to the lowest common denominator. For example:

$$\begin{array}{rcl} 0.1 & = & 1 / 10 \\ 0.95 & = & 19 / 20 \quad [ 95 / 100 ] \\ 1.33\overline{3} & = & 4 / 3 \quad [ (1.33\overline{3} \cdot 10 - 1.33\overline{3}) / (10 - 1) ] \\ 1.5 & = & 3 / 2 \quad [ 15 / 10 ] \end{array}$$

The *Pre-Scale* conversion operates directly on a stream of input pulses. Changing coefficients does not alter the *Present Value*, but the effect of the transition on any internal remainder is undefined.

The *Scale* and *Units of Measure* properties store arbitrary values. These may be useful to attach relevant metadata directly to a pulse input object, but they do not directly affect the counting operation.

The *Value Set* property allows accumulator initialization. This may be useful for continuity when the EM-RS485 replaces an existing meter. When set, *Value Set* follows the defined BACnet procedure:

1. The current *Present Value* is preserved in *Value Before Change*.
2. The value is stored in both *Value Set* and *Present Value*.
3. If valid, the current date and time are stored in *Value Change Time*.


# Accumulators (Energy)

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Status Flags	R	
• Event State	R	Always <i>Normal</i>
• <b>Reliability</b>	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Out of Service	<b>W</b>	
• Units of Measure	R	
• Maximum Present Value	R	Always 999,999
• Scale	R	Always 1.0
• <b>Pre-scale</b>	<b>R</b>	Always { 1,1 }
• Property List	R	

The meter provides two objects to access each energy measurement. Both objects access the same internal register, with a fixed capacity of  $\pm 1.0$  TWh. Reading either *Present Value* always returns a value scaled to the system *Energy Units* (see [MSV1.73](#)).

1. The *Accumulators* return an unsigned integer, 0 – *Maximum Present Value*. When the energy exceeds the *Maximum Present Value*, the value wraps to 0 (modulo arithmetic). This view most closely corresponds to traditional analog meters, with the primary advantage that the energy resolution is fixed at 1 *Energy Unit*.

If energy overflows, the overflow energy may still be read by setting the next larger *Energy Unit*. Negative power causes net accumulators (e.g. [ACC1706](#)) to run backwards; underflow causes the value to wrap from 0 backwards to *Maximum Present Value*.

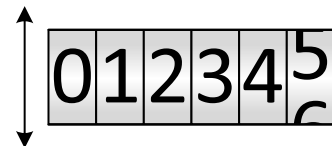

2. The *Analog Inputs* (see [AI700](#), [AI1700](#) ff.) return a floating point value that does not overflow (unless the internal 1.0 TWh register itself overflows). However, the resolution will gradually degrade as energy accumulates, making it harder to observe small changes in energy over short intervals.

Corresponding objects share *Out of Service* and *Reliability*. For example, setting the *Out of Service* of [ACC700](#) sets *Out of Service* [AI700](#) at the same time. Both properties automatically reset when the meter itself resets, to *False* and *No Fault Detected* respectively.

To initialize an accumulator, set *Out of Service* to *True*, and then write the desired energy to the *Present Value* of either object. This may be useful when the EM-RS485 replaces an existing meter. Set *Out of Service* to *False* to begin accumulating new energy again.

**WARNING:** Energy accumulators left *Out of Service* will not accumulate new energy!

*Reliability* returns *Over Range* when any energy accumulates during *Over Voltage* (see [AI1420](#)) or *Over Current* (see [AI1520](#)) conditions. However, accumulators do not otherwise track reliability.



## System

### ACC700 Total Real Energy (ACC)

R/NV

Accumulator versions of [AI700](#) – [AI706](#). The default units are kWh (see [MSV173](#)).

Returns the combined energy of the system phases (see [MSV161](#)). For a 3 Phase installation:

$$Total = ACC1700 + ACC2700 + ACC3700$$

$$Import = ACC1702 + ACC2702 + ACC3702$$

$$Export = ACC1704 + ACC2704 + ACC3704$$

$$Net = ACC1706 + ACC2706 + ACC3706$$

ACC702 Import • ACC704 Export • ACC706 Net

### ACC720 System Real Energy (ACC)

R/NV

Accumulator versions of [AI720](#) – [AI726](#). The default units are kWh (see [MSV173](#)).

Returns the combined energy of the system phases (see [MSV161](#)). Unlike *Total Real Energy* (above), these accumulators derive from *Net Real Power* (see [AI620](#)). For a 3 Phase installation,

$$System = \int |P_{NET}| \cdot dt = \int |P_R + P_S + P_T| \cdot dt$$

Compare the order of the absolute value operations in this example with the *Total Real Energy* derived from the *Total Real Power* (see [AI600](#)):

$$Total = \int \Sigma P \cdot dt = \int (|P_R| + |P_S| + |P_T|) \cdot dt$$

When the individual *Real Power* (see [AI1600](#)) of all system phases flows in the same direction (import or export), the *System* accumulators track the corresponding *Total* accumulations exactly. However, the *System* calculation allows opposite phase powers to cancel before accumulation.

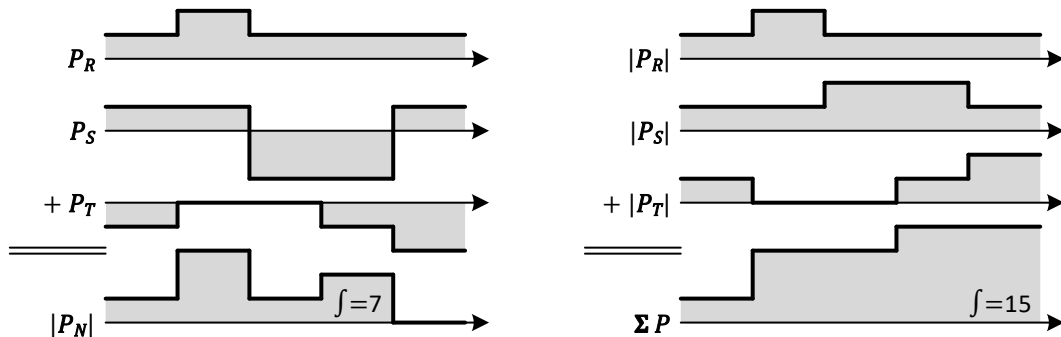


Figure 4: System vs. Total Energy

The *Import* and *Export* accumulations follow the sign of *Net Real Power*:

$$Import = \int \begin{cases} |P_{NET}| \cdot dt & \text{if } P_{NET} > 0 \\ 0 & \text{otherwise} \end{cases}$$

$$Export = \int \begin{cases} |P_{NET}| \cdot dt & \text{if } P_{NET} < 0 \\ 0 & \text{otherwise} \end{cases}$$

*Net Real Energy* (see [ACC706](#)) equals any possible *System Net* accumulator, as the calculation does not take absolute values.

ACC722 Import • ACC724 Export

## ACC740 Total Reactive Energy (ACC)

R/NV

Accumulator versions of [AI740](#) – [AI744](#). The default units are kVARh (see [MSV173](#)).

Returns the combined energy of the system phases (see [MSV161](#)). For a 3 Phase installation:

$$Total = ACC1740 + ACC2740 + ACC3740$$

$$Import = ACC1742 + ACC2742 + ACC3742$$

$$Export = ACC1744 + ACC2744 + ACC3744$$

ACC742 Import • ACC744 Export

## ACC760 Total Apparent Energy (ACC)

R/NV

Accumulator versions of [AI760](#) – [AI764](#). The default units are kVAh (see [MSV173](#)).

Returns the combined energy of the system phases (see [MSV161](#)). For a 3 Phase installation:

$$Total = ACC1760 + ACC2760 + ACC3760$$

$$Import = ACC1762 + ACC2762 + ACC3762$$

$$Export = ACC1764 + ACC2764 + ACC3764$$

ACC762 Import • ACC764 Export

## R Phase

### ACC1700 Total R Phase Real Energy (ACC)

R/NV

Accumulator versions of [AI1700](#) – [AI1706](#). The default units are kWh (see [MSV173](#)).

Returns the accumulation of *Real Power*  $P$  (see [AI1600](#)). Note the absolute value operation in the accumulation of *Total* but not *Net*:

$$Total = \int |P| \cdot dt$$

$$Net = \int P \cdot dt$$

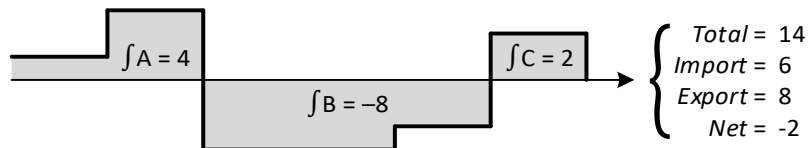


Figure 5: Real Energy

The *Import* and *Export* accumulations follow the sign of *Real Power*:

$$Import = \int \begin{cases} |P| \cdot dt & \text{if } P > 0 \\ 0 & \text{otherwise} \end{cases}$$

$$Export = \int \begin{cases} |P| \cdot dt & \text{if } P < 0 \\ 0 & \text{otherwise} \end{cases}$$

Accumulation stops during *Phase Loss* conditions (see [AI1420](#)).

ACC1702 Import • ACC1704 Export • ACC1706 Net

## ACC1740 Total R Phase Reactive Energy (ACC)

R/NV

Accumulator versions of [AI1740](#) – [AI1744](#). The default units are kVARh (see [MSV173](#)).

Returns the accumulation of *Reactive Power*  $Q$  (see [AI1640](#)):

$$Total = \int |Q| \cdot dt$$

The *Import* and *Export* accumulations follow the sign of *Real Power*  $P$  (see [AI1600](#)):

$$Import = \int \begin{cases} |Q| \cdot dt & \text{if } P > 0 \\ 0 & \text{otherwise} \end{cases}$$

$$Export = \int \begin{cases} |Q| \cdot dt & \text{if } P < 0 \\ 0 & \text{otherwise} \end{cases}$$

Accumulation stops during *Phase Loss* conditions (see [AI1420](#)).

Although *Reactive Power* itself is signed, the accumulators capture only the magnitude without distinguishing between capacitive and inductive modes. Consider calculating this from average power (one of [AI1648](#) – [AI1652](#)) over an interval instead:

$$Net = \overline{Q} \cdot \Delta t$$

**ACC1742 Import • ACC1744 Export**

## ACC1760 Total R Phase Apparent Energy (ACC)

R/NV

Accumulator versions of [AI1760](#) – [AI1764](#). The default units are kVAh (see [MSV173](#)).

Returns the accumulation of *Apparent Power*  $S$  (see [AI1660](#)):

$$Total = \int S \cdot dt = \int V \cdot I \cdot dt$$

The *Import* and *Export* accumulations follow the sign of *Real Power*  $P$  (see [AI1600](#)):

$$Import = \int \begin{cases} S \cdot dt & \text{if } P > 0 \\ 0 & \text{otherwise} \end{cases}$$

$$Export = \int \begin{cases} S \cdot dt & \text{if } P < 0 \\ 0 & \text{otherwise} \end{cases}$$

Accumulation stops when the *RMS Voltage* becomes invalid (see [AI1420](#)).

**ACC1762 Import • ACC1764 Export**

## S Phase

---

### ACC2000 – ACC2999

S Phase *Accumulators* parallel the R Phase, offset +1000.

For example, read AI2700 for *Total S Phase Real Energy*.

## T Phase

---

### ACC3000 – ACC3999

T Phase *Accumulators* parallel the T Phase, offset +2000.

For example, read AI3700 for *Total T Phase Real Energy*.

# Analog Inputs

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	Only writable when <i>Out Of Service</i> is TRUE
• Status Flags	R	
• Event State	R	Always NORMAL
• <b>Reliability</b>	<b>W</b>	Only writable when <i>Out Of Service</i> is TRUE
• Out of Service	<b>W</b>	
• Units of Measure	R	
• <b>Update Interval</b>	<b>R</b>	
• <b>Minimum Present Value</b>	<b>R</b>	
• <b>Maximum Present Value</b>	<b>R</b>	
• <b>Resolution</b>	<b>R</b>	
• Property List	R	

For statistical purposes, analog input values are organized into groups. By convention, the primary object leading each group provides the most accurate, up-to-date reading possible. Secondary objects within a group provide statistical measurements in time that may support some simple logging applications with less overhead for setup and bandwidth. Typical statistical values include:

- **Smoothed:** Returns the value after applying a first-order exponential filter (see [AV134](#)).
- **Minimum:** Returns the single lowest valid reading taken since last reset.
- **Maximum:** Returns the single highest valid reading taken since last reset.
- **Average:** Returns the average of all valid readings taken since last reset.


Except for the energy accumulators, each analog input group shares common *Out Of Service* and *Reliability* properties. Setting *Out Of Service* to *True* disables all statistical calculation, so that any group value may be arbitrarily set. Statistics will be reset after setting *Out Of Service* to *False* again.

Once recorded, there are a few methods to reset statistics records (*Minimum*, *Maximum*, *Average*):

- Manually for a single object, by writing 0 to the *Present Value* (**W0** in the [Access Legend](#)).
- Manually for an individual group, by setting *Out Of Service* to *True* and then *False* again.
- Manually for multiple objects, by writing one of the *Statistics Reset* keys (see [AV192](#), [AV1192](#)).
- Automatically for single values, by configuring *Auto Reset Statistics* (see [BV195](#)).

Most statistical values reset with a value equal to the *Present Value* of the primary object (see Figure 6).

Demand statistical values reset to 0 until the end of the current demand window (see [AI1800](#), [AV186](#)).

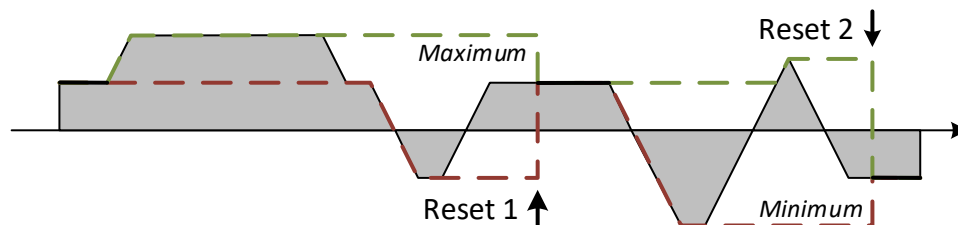

**Figure 6: Reset Behavior**

## General

---

### AI310 Temperature

R/W0

Returns the approximate ambient temperature at the meter's installed location. The default units are °F (see [MSV133](#)). The meter compensates small drifts in CVT voltage and current measurements (the meter assumes CVT temperature is similar to meter temperature, see *Installation Instructions*).

If the temperature is beyond the product specifications, the *Device Status* LED will indicate the corresponding *Temperature Limit* warning condition (see *Installation Instructions*).

The default smoothed value response time is 30 seconds (see [AV134](#)).

**AI312 Smoothed • AI314 Minimum • AI316 Maximum • AI318 Average**

### AI380 Power Supply Voltage

R/W0

Returns the approximate working voltage provided to the meter's low voltage power supply, in V. The voltage reported is an internal voltage after rectification and input protection (typically 1.0 – 2.0 V less than the external supply).

The meter requires 12.0 VDC minimum for full operation. If the measured voltage drops below this threshold, the meter anticipates a power loss and saves the configuration and accumulated energy to non-volatile memory. However, if the power loss proves incomplete, the meter may continue to operate at the reduced supply voltage. In this state, accumulated energy may be lost if the meter has insufficient reserve power when (if) full power loss occurs. The *Device Status* LED will indicate the corresponding *Low Supply Voltage* warning condition (see *Installation Instructions*).

**AI382 Smoothed • AI384 Minimum • AI386 Maximum • AI388 Average**

## System

---

### AI410 Line Frequency

R/W0

Returns the fundamental AC line frequency  $f$ , in Hz. If there are no CVTs connected, or all of the CVTs measure *Phase Loss* conditions (see [AI1420](#)), returns 0 Hz.

With a *PowerPrint Frequency* target set (see [AV242](#)), frequency variations may set the *Frequency Drift* condition (see [AV400](#)). If so, *Reliability* will also return *Over Range* or *Under Range*, as appropriate.

The default smoothed value response time is 60 seconds (see [AV142](#)).

**AI412 Smoothed • AI414 Minimum • AI416 Maximum • AI418 Average**

### AI420 Phase Average RMS Voltage

R/W0

Returns the average  $\bar{V}$  of the *RMS Voltage* (see [AI1420](#)) of all valid system phases. If there are no valid phases, *Present Value* returns 0 V and *Reliability* returns an appropriate reason.

For average calculations in general, a valid system phase must:

- Be included in the *System Phase Selection* (see [MSV161](#)),
- Have a *CVT Status* of *No Error* (see [MSV1103](#)), and
- Not be detecting the *Phase Loss* condition (see [AI1420](#)).

The default smoothed value response time is 10 seconds (see [AV144](#)).

**AI422 Smoothed • AI424 Minimum • AI426 Maximum • AI428 Average**

## AI450 Phase to Phase Average RMS Voltage

R/W0

Returns the average  $\overline{V_{PP}}$  of the *Phase to Phase RMS Voltage* (see [AI1450](#)) between valid system phases (as defined by [AI420](#)). If there are exactly two valid phases, the average collapses to the single reading between them. If there are less than two valid phases, *Present Value* returns 0 V and *Reliability* returns an appropriate reason.

As with individual phase to phase voltages measurements, the average is valid only when CVTs share a common neutral connection and all phases have the same frequency (the meter does not check either condition).

The default smoothed value response time is 10 seconds (see [AV144](#)).

**AI452 Smoothed • AI454 Minimum • AI456 Maximum • AI458 Average**

## AI520 Phase Average RMS Current

R/W0

Returns the average  $\overline{I}$  of the *RMS Current* (see [AI1520](#)) of valid system phases (as defined by [AI420](#)). If there are no valid phases, *Present Value* returns 0 A and *Reliability* returns an appropriate reason.

The default smoothed value response time is 2 seconds (see [AV154](#)).

**AI522 Smoothed • AI524 Minimum • AI526 Maximum • AI528 Average**

## AI540 Phase Average Current Angle


R/W0

Returns the average  $\overline{\phi}$  of the *Current Angle* (see [AI1540](#)) of valid system phases. The default units are *Degrees* (see [MSV153](#)), normalized between  $-180$  and  $+180^\circ$ .

In addition to the standard criteria (as defined by [AI420](#)), valid system phases must have sufficient load power to give a stable measurement (see [AI1600](#), *No Load* condition). If there are no valid phases, *Present Value* returns  $0^\circ$ , and *Reliability* returns an appropriate reason.

The average of angles with a total sweep approaching  $180^\circ$  or more (see Figure 7) is indeterminate. In such cases, *Present Value* returns  $0^\circ$ , and *Reliability* returns *Unreliable Other*.

An indeterminate average often indicates that the CVT voltage leads or current sensor loop were installed backwards. If so, a negative multiplier (see [AV1142](#), [AV1152](#)) may restore the result.

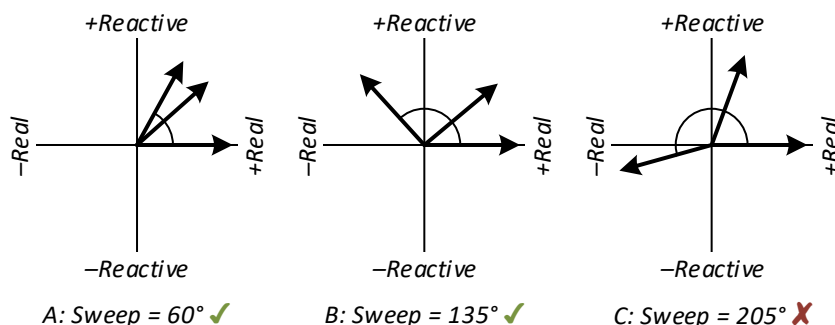

**Figure 7: Swept Current Angle**

The default smoothed value response time is 2 seconds (see [AV154](#)).

**AI542 Smoothed • AI544 Minimum • AI546 Maximum • AI548 Average**

### AI550 System Power Factor

R/W0

Returns the true (apparent) power factor  $\widehat{pf}$  of the valid system phases (as defined by [AI420](#)).

Unlike an arithmetic average, the system power factor weights the *Real Power* (see [AI620](#)) and *Apparent Power* (see [AI660](#)) of each phase (see Figure 8). This definition keeps lightly loaded phases with relatively poor power factor from introducing excessive distortion in the result.

$$\widehat{pf} = \frac{P_{NET}}{S}$$

If negative, the system export power exceeds the import power.

If the power in two phases flows in opposite directions, the real components cancel, reducing the overall power factor.

The default smoothed value response time is 2 seconds (see [AV164](#)).

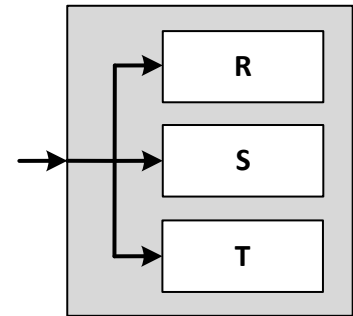


Figure 8: System Power Factor

AI552 Smoothed • AI554 Minimum • AI556 Maximum • AI558 Average

### AI600 Total Real Power

R/W0

Returns the absolute sum  $\Sigma P$  of the *Real Power* (see [AI1600](#)) of valid system phases (as defined by [AI420](#)). The default units are kW (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

AI602 Smoothed • AI604 Minimum • AI606 Maximum • AI608 Average

### AI610 Phase Average Real Power

R/W0

Returns the absolute average  $\overline{P}$  of the *Real Power* (see [AI1600](#)) of valid system phases (as defined by [AI420](#)). The default units are kW (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

AI612 Smoothed • AI614 Minimum • AI616 Maximum • AI618 Average

### AI620 Net Real Power

R/W0

Returns the signed sum  $P_{NET}$  of the *Real Power* (see [AI1600](#)) of valid system phases (as defined by [AI420](#)). The default units are kW (see [MSV163](#)). Negative values indicate that overall export power exceeds import power.

The default smoothed value response time is 2 seconds (see [AV164](#)).

AI622 Smoothed • AI624 Minimum • AI626 Maximum  
AI628 Overall Average • AI630 Import Average • AI632 Export Average

### AI640 Total Reactive Power

R/W0

Returns the absolute sum  $\Sigma Q$  of the *Reactive Power* (see [AI1640](#)) of valid system phases (as defined by [AI420](#)). The default units are kVAR (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

AI642 Smoothed • AI644 Minimum • AI646 Maximum • AI648 Average

## **AI650 Phase Average Reactive Power** **R/W0**

Returns the absolute average  $\bar{Q}$  of the *Reactive Power* (see [AI1640](#)) of valid system phases (as defined by [AI420](#)). The default units are kVAR (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI652 Smoothed • AI654 Minimum • AI656 Maximum • AI658 Average**

## **AI660 Total Apparent Power** **R/W0**

Returns the absolute sum  $\Sigma S$  of the *Apparent Power* (see [AI1660](#)) of valid system phases (as defined by [AI420](#)). Always positive. The default units are kVA (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI662 Smoothed • AI664 Minimum • AI666 Maximum • AI668 Average**

## **AI670 Phase Average Apparent Power** **R/W0**

Returns the absolute average  $\bar{S}$  of the *Apparent Power* (see [AI1660](#)) of valid system phases (as defined by [AI420](#)). The default units are kVA (see [MSV163](#)).

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI672 Smoothed • AI674 Minimum • AI676 Maximum • AI678 Average**

## **AI700 Total Real Energy (AI)** **R/NV**

Full range versions of [ACC700–ACC706](#). The default units are kWh (see [MSV173](#)).

**AI702 Import • AI704 Export • AI706 Net**

## **AI720 System Real Energy (AI)** **R/NV**

Full range versions of [ACC720–ACC724](#). The default units are kWh (see [MSV173](#)).

**AI722 Import • AI724 Export**

## **AI740 Total Reactive Energy (AI)** **R/NV**

Full range versions of [ACC740–ACC744](#). The default units are kVARh (see [MSV173](#)).

**AI742 Import • AI744 Export**

## **AI760 Total Apparent Energy (AI)** **R/NV**

Full range versions of [ACC760–ACC764](#). The default units are kVAh (see [MSV173](#)).

**AI762 Import • AI764 Export**

## **AI800 Demand Total Real Power** **R/W0/NV**

Returns the absolute sum  $\Sigma P_D$  of the *Demand Real Power* (see [AI1800](#)) of valid system phases (as defined by [AI420](#)). The default units are kW (see [MSV163](#)).

**AI802 Previous • AI804 Minimum • AI806 Maximum**

## **AI820 Demand Net Real Power** **R/W0/NV**

Returns the signed sum  $\Sigma P_{D-NET}$  of the *Demand Real Power* (see [AI1800](#)) of valid system phases (as defined by [AI420](#)). The default units are kW (see [MSV163](#)).

**AI822 Previous • AI824 Minimum • AI826 Maximum**



## AI840 Demand Total Reactive Power

R/W0/NV

Returns the absolute sum  $\Sigma Q_D$  of the *Demand Reactive Power* (see [AI1840](#)) of valid system phases (as defined by [AI420](#)). The default units are kVAR (see [MSV163](#)).

**AI842 Previous • AI844 Minimum • AI846 Maximum**

## AI860 Demand Total Apparent Power

R/W0/NV

Returns the absolute sum  $\Sigma S_D$  of the *Demand Apparent Power* (see [AI1860](#)) of valid system phases (as defined by [AI420](#)). The default units are kVA (see [MSV163](#)).

**AI862 Previous • AI864 Minimum • AI866 Maximum**

## R Phase

### AI1420 R Phase RMS Voltage

R/W0

Returns the effective line RMS voltage  $V$  measured between the CVT voltage leads and multiplied by the *Voltage Multiplier* (see [AV1142](#)), in V. Always positive, regardless of the sign of the multiplier.

When voltage exceeds the *Voltage Rating* (see [AV1140](#)), the measurement may have a reduced accuracy, and *Reliability* will return *Over Range*.


When the voltage drops below approximately 15% of the *Voltage Rating* (90 V for a 600 V rated CVT), the *Phase Loss* condition (see [AV1400](#)) may be set. Even at higher RMS voltages, *Phase Loss* may still occur if the frequency exceeds the system limits (see *Installation Instructions*).

In *Phase Loss* conditions, the *Real Power* (see [AI1600](#)), *Reactive Power* (see [AI1640](#)), and derived measurements become invalid. Also, *Reliability* will return *Under Range*. *Apparent Power* (see [AI1660](#)) remains valid down to approximately 2% of the *Voltage Rating* (12 V for a 600 V rated CVT), although measurements may have a reduced accuracy. Below 2%, returns 0 V.

With a *PowerPrint Voltage* target set (see [AV1144](#)), voltage variations may set the *Brown Out Voltage* (too low) or *Surge Voltage* (too high) conditions (see [AV400](#)). If so, *Reliability* will return *Over Range* or *Under Range*, as appropriate.

The default smoothed value response time is 10 seconds (see [AV144](#)).

**AI1422 Smoothed • AI1424 Minimum • AI1426 Maximum • AI1428 Average**

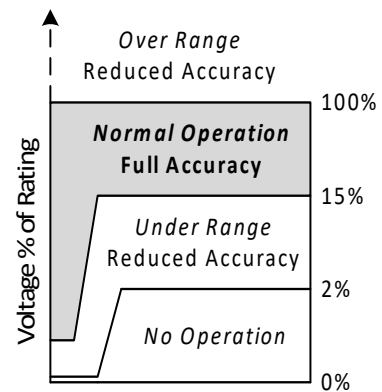

**Figure 9: Voltage Range**

### AI1440 R to S Phase Voltage Angle

R/W0

Returns the relative angle  $\theta$  between the voltage of this phase and the “next” (definition below). The default units are *Degrees* (see [MSV153](#)), normalized between  $-180$  and  $+180^\circ$ .

**IMPORTANT:** Unlike most measurements (intra-phase and independent), the definition of phase to phase voltage depends on “next” phase. The complete progression:

- AI1440 R Phase to S Phase
- AI2440 S Phase to T Phase
- AI3440 T Phase to R Phase

Positive angles indicate that the “next” phase lags this phase (see Figure 10). A negative *Voltage Multiplier* (see [AV1142](#)) for one phase rotates the result by 180°, also normalized. (Negative multipliers on both phases cancel each other)


This measurement assumes that both phases have the same frequency (the meter does not check). If the voltage of either phase drops too low, this value returns 0 V.

With a *PowerPrint Voltage Angle* target set (see [AV1146](#)), angle variations may set the *Phase Drift* condition (see [AV400](#)). If so, *Reliability* will return *Over Range* or *Under Range*, as appropriate. Otherwise, *Reliability* always returns some combination of the two phase reliabilities.

With no *PowerPrint Voltage Angle* target, the meter substitutes 120°, a standard angle for 3-phase services. Three angles of approximately –120° will set the *Reverse RST Order* condition. Three angles not approximately equal to either –120° or +120° will set the *Not Three Phase* condition. *Phase Loss* on either phase blocks both conditions from being set.

The default smoothed value response time is 60 seconds (see [AV142](#)).

**AI1442 Smoothed • AI1444 Minimum • AI1446 Maximum • AI1448 Average**

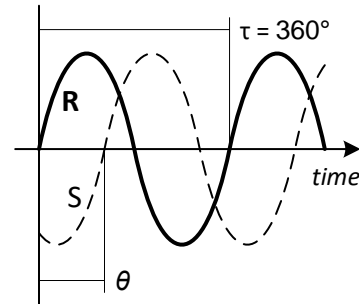


**Figure 10: Phase Progression**

## AI1450 R to S Phase RMS Voltage

**R/W0**

Returns the RMS voltage  $V_{PP}$  between the “hot” leads of this phase and the next (as defined by [AI1440](#)), in V. This calculation assumes a common neutral connection (see Figure 11) between phases and that both phases have the same frequency (the meter does not check for either).

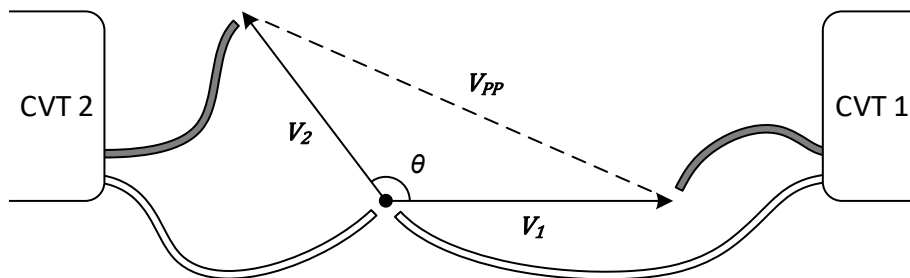

**Figure 11: Phase to Phase Common Neutral**

The following equation represents the basic phase to phase voltage calculation:

$$V_{PP} = \sqrt{(V_1 - V_2 \cos \theta)^2 + (V_2 \sin \theta)^2}$$

A negative *Voltage Multiplier* (see [AV1142](#)) for exactly one phase rotates the result by 180°, effectively reversing the polarity of the neutral and “hot” leads.

*Reliability* always returns some combination of the phase and angle reliabilities.

The default smoothed value response time is 10 seconds (see [AV144](#)).

**AI1452 Smoothed • AI1454 Minimum • AI1456 Maximum • AI1458 Average**

## AI1520 RMS Current

R/WO

Returns the effective line RMS current  $I$  measured with the CVT current sensing loop and multiplied by the *Current Multiplier* (see [AV1152](#)), in A. Always positive, regardless of the sign of the multiplier.

When the current exceeds the *Current Rating* (see [AV1150](#)) the measurement may have a reduced accuracy, and *Reliability* may return *Over Range*.

Fundamentally, Rogowski coils measure changes in current, not current itself. This is why Rogowski coils are not well-suited for DC current measurements and also why they may be sensitive to high frequency harmonics. Even though a particular RMS current may be within the CVT *Current Rating*, individual harmonic components may exceed the input range.

If the meter detects that current harmonics may lead to reduced accuracy, the *High Harmonics* condition (see [AV1400](#)) will be set. However, given the wide variation in harmonics between different loads, the meter cannot detect every possible scenario leading to reduced accuracy.

The default smoothed value response time is 2 seconds (see [AV154](#)).

**AI1522 Smoothed • AI1524 Minimum • AI1526 Maximum • AI1528 Average**

## AI1540 Current Angle

R/WO

Returns the four quadrant current angle  $\varphi$ . The default units are *Degrees* (see [MSV153](#)), normalized between  $-180^\circ$  and  $+180^\circ$ . A negative *Current Multiplier* (see [AV1152](#)) rotates the result by  $180^\circ$ , effectively reversing the orientation of the current sensor loop.

Current angle measures the angle of the phase current fundamental with respect to the voltage fundamental. Positive angles represent leading (capacitive) loads.

Internally, the meter calculates from the vector formed by *Real Power* (see [AI1600](#)) and *Reactive Power* (see [AI1640](#)). Note the negation required to maintain sign convention (see Figure 12):

$$\varphi = -\operatorname{atan}\frac{Q}{P}$$


Displacement power factor may be easily derived from current angle:

$$pf_D = \cos(\varphi) = \frac{1}{\sqrt{1 + \left(\frac{Q}{P}\right)^2}}$$

During *No Load* conditions the *Real Power* (see [AI1600](#)) becomes too small for reliable calculation. In this case *Present Value* returns  $0^\circ$  and *Reliability* returns *Under Range*. Otherwise, *Reliability* returns some combination of the *RMS Voltage* and *RMS Current* reliabilities.

The default smoothed value response time is 2 seconds (see [AV154](#)).

**AI1542 Smoothed • AI1544 Minimum • AI1546 Maximum • AI1548 Average**

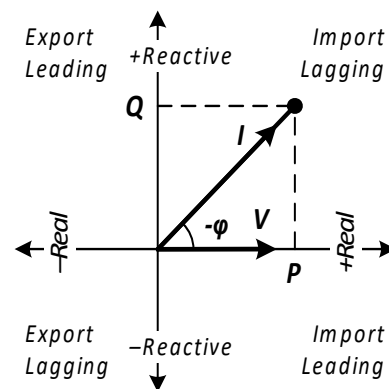

**Figure 12: Current Angle Quadrants**

## AI1550 Power Factor

R/W0

Returns true (a.k.a. apparent) power factor *pf*. A negative value indicates export power.

$$pf = P/S = P/V \cdot I$$

*Reliability* follows *Current Angle* (see [AI1540](#)), including *No Load* conditions (see [AI1600](#)).

When power factor drops below 0.5 (absolute value), the *Low Power Factor* condition (see [AV1400](#)) is set. *Low Power Factor* may indicate an installation error (see *Installation Instructions*).

The default smoothed value response time is 2 seconds (see [AV154](#)).

**AI1552 Smoothed • AI1554 Minimum • AI1556 Maximum • AI1558 Average**


## AI1600 Real Power

R/W0

Returns real power *P*, after multiplication by the *Power Multiplier* (see [AV1162](#)). The default units are kW (see [MSV163](#)). A negative value indicates export power.

When *Real Power* drops very low, the *No Load* condition (see [AV1400](#)) is set. During *No Load* conditions, *Current Angle* (see [AI1540](#)) and *Power Factor* (see [AI1550](#)) measurements become unreliable. The *No Load* condition is also set during *Phase Loss* conditions.

The *Import* and *Export Averages* only update during the respective intervals (see Figure 13). The *Import Average* is always positive, and the *Export Average* is always negative. When power flows exclusively in one direction, one of these will remain at 0 kW.

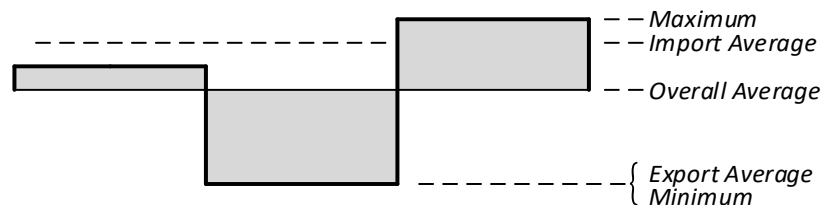

**Figure 13: Real Power Averages**

During *Phase Loss* conditions (see [AI1420](#)), returns 0 kW, all of the *Averages* stop updating, and *Reliability* returns *Under Range*. Otherwise, *Reliability* returns a combination of *RMS Voltage* and *RMS Current* reliabilities.

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI1602 Smoothed • AI1604 Minimum • AI1606 Maximum  
AI1608 Overall Average • AI1610 Import Average • AI1612 Export Average**

## AI1640 Reactive Power

R/W0

Returns reactive power *Q*, after multiplication by the *Power Multiplier* (see [AV1162](#)). The default units are kVAR (see [MSV163](#)). A negative value indicates a capacitive load (leading power factor).

The *Import* and *Export Averages* only update during the respective *Real Power* (see [AI1600](#)) intervals. When *Real Power* flows exclusively in one direction, one of these will remain at 0 kW. All three averages may be positive or negative, depending on the mix of capacitive and inductive loads.

During *Phase Loss* conditions (see [AI1420](#)), returns 0 kVAR, all of the *Averages* stop updating, and *Reliability* returns *Under Range*. Otherwise, *Reliability* follows *Real Power*.

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI1642 Smoothed • AI1644 Minimum • AI1646 Maximum  
AI1648 Overall Average • AI1650 Import Average • AI1652 Export Average**

## AI1660 Apparent Power

R/W0

Returns apparent power  $S$ , after multiplication by the *Power Multiplier* (see [AV1162](#)). The default units are kVA (see [MSV163](#)). Apparent power is always positive:

$$S = V \cdot I$$

The *Import* and *Export Averages* only update during the respective *Real Power* (see [AI1600](#)) intervals. When *Real Power* flows exclusively in one direction, one of these will remain at 0 kW.

When the *RMS Voltage* becomes invalid (see [AI1420](#)), returns 0 kVA, all of the *Averages* stop updating, and *Reliability* returns *Under Range*. Otherwise, *Reliability* follows *Real Power*.

The default smoothed value response time is 2 seconds (see [AV164](#)).

**AI1662 Smoothed • AI1664 Minimum • AI1666 Maximum**  
**AI1668 Overall Average • AI1670 Import Average • AI1672 Export Average**

## AI1700 Total Real Energy (AI)

R/NV

Full range versions of [ACC1700](#)–[ACC1706](#). The default units are kWh (see [MSV173](#)).

**AI1702 Import • AI1704 Export • AI1706 Net**

## AI1740 Total Reactive Energy (AI)

R/NV

Full range versions of [ACC1740](#)–[ACC1742](#). The default units are kVARh (see [MSV173](#)).

**AI1742 Import • AI1744 Export**

## AI1760 Total Apparent Energy (AI)

R/NV

Full range versions of [ACC1760](#)–[ACC1762](#). The default units are kVAh (see [MSV173](#)).

**AI1762 Import • AI1764 Export**

## AI1800 Demand Real Power

R/W0/NV

Returns the average  $P_D$  of *Real Power* (see [AI1600](#)) over a windowed interval. The default units are kW (see [MSV163](#)). Negative values indicate that export energy exceeded import energy over the course of the demand window.

Demand power bridges a gap between peak power and total energy accumulation. Many peak power measurements are short-lived and can be absorbed by an electrical utility with minimal side effects. However, sustained high power usage requires a fixed capacity investment regardless of the actual consumption (for example, transmission lines). Some utilities bill larger customers for both total energy consumption and peak demand power, although specific rules vary.

Internally, demand windows run for a fixed interval, with each new window marking the end of the previous window. The *Window Time* (see [AV183](#)) sets the maximum window length, and periodic *Synchronization* (see [MSV181](#)) can help align the start of a window with an external reference. All of the demand power objects follow the same common window schedule.

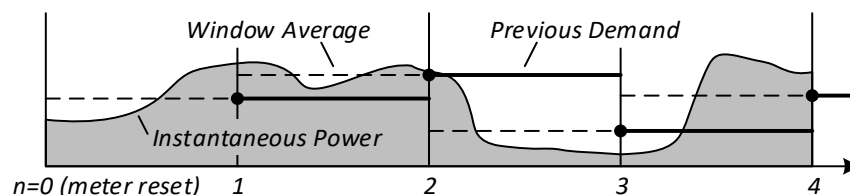



Figure 14: Fixed Demand Windows

During each window, demand continuously tracks the flow of energy in the line. When this value stops changing at the end of the window, it becomes *Previous Demand* (see Figure 14). At the same time, the *Minimum* and *Maximum Demand* statistics update with any new record(s). Finally, the demand tracker resets for the next window. The *Demand Window Count* (see [AV186](#)) increments exactly once for each demand window.

Formally, demand power may be defined as measured energy divided by the measurement time:

$$P_D = \frac{\Delta E}{\Delta t} = \frac{\int_{t_n}^{t_{n+1}} P \cdot dt}{t_{n+1} - t_n}$$

Notwithstanding previous language that describes a fixed window, the primary demand power object returns a continuously smoothed representation of *Current Demand*. This value smoothly transitions between the fixed demand levels as each window develops (see Figure 15). While not a substitute for a true sliding window calculation, this provides a more timely view of changing demand without waiting for the end of an interval. In *Full Synchronization* mode (see [MSV181](#)), the behavior of *Current Demand* is undefined.

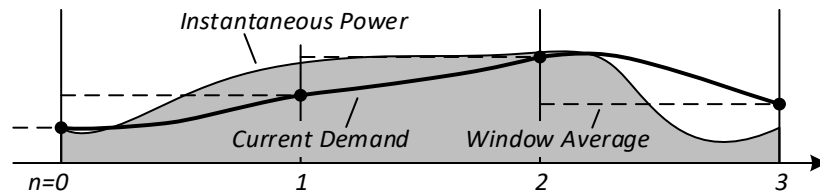

**Figure 15: Current Demand Smoothing**

*Reliability* returns *Over Range* if either the *Over Voltage* (see [AI1420](#)) or *Over Current* (see [AI1520](#)) conditions occur during the window. However, demand objects do not otherwise track reliability.

After every reset, the meter restores the non-volatile *Minimum* and *Maximum Demand* statistics. The *Current Demand* becomes available immediately, but the *Previous Demand* requires one full window interval to fully initialize.

**WARNING:** Writing *OutOfService* to *True* will interrupt the calculation of *Current Demand*. This preserves a constant value for inspection and modification during the *OutOfService* interval. However, on writing *OutOfService* to *False* again, the *Present Value* may become corrupt. Additionally, the corrupt value may be propagated to derived statistics at the end of the current window. Any demand statistics corrupted in this way should be reset (see [AV192](#)).

**AI1802 Previous • AI1804 Minimum • AI1806 Maximum**

## **AI1840 Demand Reactive Power**

**R/W0/NV**

Returns the average  $Q_D$  of *Reactive Power* (see [AI1640](#)) over a windowed interval. The default units are kVAR (see [MSV163](#)). Negative values indicate a primarily capacitive load (leading power factor) over the course of the interval.

**AI1842 Previous • AI1844 Minimum • AI1846 Maximum**

## **AI1860 Demand Apparent Power**

**R/W0/NV**

Returns the average  $S_D$  of *Apparent Power* (see [AI1660](#)) over a windowed interval. The default units are kVA (see [MSV163](#)).

**AI1862 Previous • AI1864 Minimum • AI1866 Maximum**

## S Phase

---

### AI2000 – AI2999

S Phase *Analog Inputs* parallel the R Phase, offset +1000.

For example, read AI2600 for the *S Phase Real Power*.

## T Phase

---

### AI3000 – AI3999

T Phase *Analog Inputs* parallel the R Phase, offset +2000.

For example, read AI3600 for the *T Phase Real Power*.

# Analog Values

---

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	Writable unless indicated otherwise.
• Status Flags	R	
• Event State	R	<i>Always Normal</i>
• <b>Reliability</b>	<b>R</b>	<i>Always No Fault Detected</i>
• Out of Service	R	<i>Always False</i>
• Units of Measure	R	
• <b>Minimum Present Value</b>	<b>R</b>	
• <b>Maximum Present Value</b>	<b>R</b>	
• <b>Resolution</b>	<b>R</b>	
• Property List	R	

## System

---

### AV103 Reset Count R/NV

Returns a lifetime count of firmware resets for any reason. The meter maintains this count in a protected section of non-volatile memory unaffected by *Configuration Reset* (see [AV190](#)).

At each reset, the meter restores accumulated energy, demand statistics, and pulse input counts from non-volatile memory. However, all the analog statistics reset, plus the *Up Time* (see [AV104](#)), *Energy Timestamp* (see [AV174](#)), and *Binary Inputs* (see [BI201](#), [BI202](#)).

### AV104 Up Time R

Returns the time since the last meter reset, in seconds. To determine the cause, read the *Last Restart Reason* property of the *Device* object.

### AV123 MAC Address R/W/NV

Sets the MS/TP address, 0 – 254 (MS/TP reserves address 255 for broadcast).

When *Auto Address* is *Active* (see [BV113](#)), returns the auto-selected address (see [Configuration](#)). Otherwise, returns the user-configured address.

Setting any address also sets *Auto Address* to *Inactive*. When setting a new address, the meter acknowledges using the original address. Therefore, a client must temporarily remember the original address and only switch at the beginning of the next new transaction.

When *Max Info Frames* (see [Device](#)) is not equal to 0 and the *MAC Address* is smaller than or equal to the *Max Master* (see [Device](#)), the meter operates in MS/TP master mode. Otherwise, the meter operates in MS/TP slave mode (no token passing or polling, no initiation of *I-Am* or *I-Have* services).

**NOTE:** Because *Max Master* must be 127 or less, addresses 128 – 254 are always MS/TP slaves.

Default: Varies



## AV124 RS485 Baud Rate

R/W/NV

Sets the communication baud rate, 1200 – 460800.

When *Auto Baud Rate* is *Active* (see [BV114](#)), returns the auto-detected baud rate (see [Configuration](#)). Otherwise, returns the user-configured baud rate.

Almost by definition, successfully reading baud rate implies a correct value, with no further action required. However, when transitioning an MS/TP network to a new baud rate, it may be useful to remotely configure the new baud rate before transitioning the gateway/controller. Setting any user-configured baud rate also sets *Auto Baud Rate* to *Inactive*.

**WARNING:** The meter provides no facility to revert the baud rate remotely. Once written, the meter will lose communication until the client baud rate matches the new configuration.

Default: *Varies*

0

## AV134 Smoothed Temperature Response Time

R/W/NV

Sets the step response time for smoothed temperature (see [AI312](#)), in seconds.

Across all groups, the various *Smoothed* values track the instantaneous measurement after the application of a first-order exponential function. This low pass filter attenuates fast changes, such as the inrush current of a large industrial motor. *Smoothed* values may provide a stable baseline measurement but will always lag the instantaneous measurement (see Figure 16A).

Formally, response time sets the time required for a *Smoothed* value to complete 90% of the transition after an ideal step between two stable values (see Figure 16B).

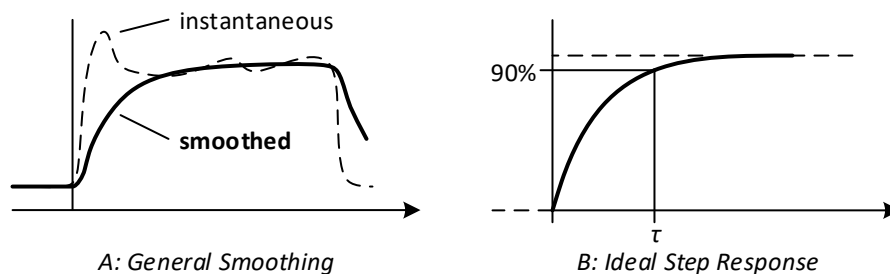


Figure 16: Smoothed Response Time

During periods of invalid measurement, *Smoothed* values return 0 (undefined). The resumption of valid measurements momentarily suppresses the smoothing function while the value stabilizes.

Default: 30 seconds

## AV142 Smoothed Frequency Response Time

R/W/NV

Sets the step response time (see [AV134](#)) for smoothed *Frequency* (see [AI412](#)) and *Voltage Angle* (e.g. [AI1442](#)), in seconds.

Default: 60 seconds

## AV144 Smoothed Voltage Response Time

R/W/NV

Sets the step response time (see [AV134](#)) for smoothed *RMS Voltage* (e.g. [AI1422](#)), in seconds.

Default: 10 seconds

**AV154 Smoothed Current Response Time** **R/W/NV**  
Sets the step response time (see [AV134](#)) for smoothed *RMS Current* (e.g. [AI1522](#)), *Current Angle* (e.g. [AI1542](#)), and *Power Factor* (e.g. [AI1552](#)), in seconds.  
Default: 2 seconds

**AV164 Smoothed Power Response Time** **R/W/NV**  
Sets the step response time (see [AV134](#)) for smoothed *Power* (e.g. [AI1602](#)), in seconds.  
Default: 2 seconds

**AV174 Energy Timestamp** **R**  
Returns a high resolution timestamp, 0 – 4194304 milliseconds ( $2^{22} - 1$ , about 1 hour).  
The timestamp value updates atomically with the various energy accumulators. If read atomically with one or more energy measurements by a *Read-Multiple* query, this timestamp may be useful for calculating accurate average power from differential energy:

$$P_{AVG} = \frac{\Delta E}{\Delta t} = \frac{E_2 - E_1}{t_2 - t_1}$$

**AV182 Demand Synchronization Hour** **R/W/NV**  
Sets the hour of the day for demand window synchronization, 0 – 23 hours.  
Only applies when the *Demand Window Synchronization* mode is *Every Day* (see [MSV181](#)). In this case, synchronization occurs at the top of the selected hour.  
Default: 0 (midnight)

**AV183 Demand Window Time** **R/W/NV**  
Sets the maximum demand window time, 0 – 1440 minutes.  
The demand measurements (see [AI1800](#)) measure average power within a windowed period.  
Every time the *Elapsed Demand Window* time (see [AV184](#)) reaches this limit, the current window closes and a new window starts.  
If set to 0 minutes, the window time is unlimited. In this case, new windows are only started by external synchronization (see [MSV181](#)) or software synchronization (see [AV184](#)).  
Default: 15 minutes

**AV184 Elapsed Demand Window** **R/W/O**  
Returns the time since the beginning of the current demand window, in minutes.  
The demand measurements (see [AI1800](#)) measure average power within a windowed period.  
This value resets to 0 at the beginning of each new demand window. Writing 0 at any time automatically starts a new window (software synchronization).

## AV186 Demand Window Count

R/NV

Returns the number of completed demand windows. Any demand window at least 1 second long counts, regardless of whether the window was defined by external synchronization (see [MSV181](#)), software synchronization (see [AV184](#)), or elapsed time (see [AV183](#)). Resetting all or a portion of the demand statistics (see [AV192](#), [AV1192](#)) does not automatically start a new demand window.

The system and all phase demand values update together (e.g. [AI1800](#)), so this count can serve as a unique key to identify each new batch of demand statistics (e.g. for logging).

Resets to 0 only when the system and all phase demand statistics are reset together (see [AV192](#)).

## AV190 Configuration Reset

W

Always returns 0. Write the reset key to reset the meter to factory defaults.

**WARNING:** The entire non-volatile configuration will be permanently lost; previous configurations cannot be recovered. This includes accumulated energy, demand statistics, and pulse input counts. This also includes the current RS485 serial format, *MAC Address*, and *Device ID*. The only parameters not affected are the *Reset Count* (see [AV103](#)) and the *Energy Reset Count* (see [AV194](#)).

After a configuration reset, the meter itself will reset and re-learn the current baud rate, serial format, protocol, and *MAC Address* (see [Configuration](#)). If the *Device ID* was previously changed, it may be necessary for the controller to rediscover the meter.

- Write 9699690 to reset the meter to factory defaults.

## AV192 Statistics Reset

W

Always returns 0. Write one of the following keys to reset some or all of the phase statistics. Writing any other value results in an error response.

**WARNING:** Selected statistics will be permanently lost; previous records cannot be recovered.

System statistics ONLY:

- Write 4765089 to reset analog statistics ([AI410](#) – [AI678](#): *Minimum, Maximum, Average*)
- Write 5338209 to reset demand statistics ([AI800](#) – [AI866](#): *Minimum, Maximum*)
- Write 6647201 to clear accumulated energy ([ACC700](#) – [ACC766](#): *All Objects*)
- Write 5811297 to reset all system statistics

System and all phases R/S/T:

- Write 7648701 to reset all analog statistics
- Write 7566461 to reset all demand statistics
- Write 6909373 to reset all accumulated energy
- Write 4762749 to reset all statistics

Phase R/S/T statistics may also be reset individually (see [AV1192](#)). Analog statistics automatically reset whenever the meter itself resets (see [AV103](#)). Individual analog and demand statistics may also be automatically reset when *Auto Reset Statistics* is *Active* (see [BV195](#)).

Resetting any subset of accumulated energy increments the *Energy Reset Count* (see [AV194](#)).

## AV194 Energy Reset Count

R/NV

Returns the number of times accumulated energy has been reset. Counts “1” for every full or partial energy reset key written (see [AV192](#), [AV1192](#)), regardless of the actual energy accumulation.

This value may be useful for auditing, since the meter maintains this count in a protected section of non-volatile memory unaffected by *Configuration Reset* (see [AV190](#)).

## AV208 Pulse Input Debounce Time

R/W/NV

Sets the delay time for each input transition before registering a new state, 0 – 255 milliseconds.

This suppresses glitches in the input, such as might be generated by a mechanical relay or electrical interference (see Figure 17). Affects both the *Pulse Inputs* (see [ACC210](#), [ACC220](#)) and corresponding *Binary Inputs* (see [BI201](#), [BI202](#)).

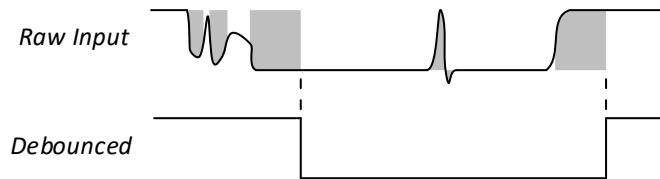


Figure 17: Debouncing Delay

If possible, set the debounce time to 50% of the expected minimum pulse time. Setting 0 disables debouncing: new input states register immediately, but the count may be noisy.

**IMPORTANT:** Because each pulse must have both a high and low interval, the maximum pulse rate will be 1/2 the equivalent rate of a single debounce time. For example, a 1 millisecond debounce time permits a maximum pulse rate of 500 Hz. Reduce the maximum pulse rate further when the duty cycle of the input is not 50%.

Default: 10 milliseconds (50 Hz)

## AV242 PowerPrint Frequency

R/W/NV

Sets the expected PowerPrint frequency. If set to any non-zero value, and the *Frequency* (see [AI410](#)) differs from expected by more than the *Frequency Tolerance* (see [AV244](#)), then the *Frequency Drift* condition (see [AV400](#)) will be set.

Set the expected frequency by writing this value directly, or by initializing *PowerPrint* (see [BV241](#)).

Default: 0 Hz (undefined)

## AV244 PowerPrint Frequency Tolerance

R/W/NV

Sets the tolerance of the *PowerPrint Frequency* (see [AV242](#)), 0 – 10 Hz.

Default: 0.2 Hz

## AV246 PowerPrint Voltage Tolerance

R/W/NV

Sets the tolerance of the *PowerPrint Voltage* (see [AV1144](#)) for all phases, 0 – 100% as a ratio of the target voltage. For example, given a target voltage of 240 V and a tolerance of 10%, PowerPrint expects voltages of 216 – 264 V.

Default: 10%

## AV248 PowerPrint Voltage Angle Tolerance

R/W/NV

Sets the tolerance of the *PowerPrint Voltage Angle* (see [AV1146](#)) for all pairs of phases, 0– 180°. The default units are *Degrees* (see [MSV153](#)).

Default: 30°

## AV400 Active Conditions

R

Returns an encoded set of flags representing active system conditions:

- |   |          |       |
|---|----------|-------|
| • <i>Mismatched Voltage</i> (see <a href="#">AJ1450</a> ) | BIT [5]  | 32    |
| • <i>Reverse RST Order</i> (see <a href="#">AJ1440</a> )* | BIT [6]  | 64    |
| • <i>Not 3-Phase</i> (see <a href="#">AJ1440</a> )*       | BIT [7]  | 128   |
| • <i>Frequency Drift</i> (see <a href="#">AJ420</a> )**   | BIT [12] | 4096  |
| • <i>Phase Drift</i> (see <a href="#">AJ1440</a> )**      | BIT [15] | 32768 |

The conditions reflect the near-real-time system status observed over the previous 1 – 2 seconds. The *Line Status* LED also indicates the active conditions (see *Installation Instructions*).

If no CVTs are installed, always returns “0”. To decode a set of condition flags, see [Appendix A](#).

\*Conditions only reported when the *PowerPrint Voltage* (see [AV1144](#)) is undefined.

\*\*Conditions only reported after activating the corresponding PowerPrint feature(s).

## AV401 Previous Conditions

R/W0

Returns an encoded set of flags representing all active and historical system conditions. Equivalent to *Active Conditions* (see [AV400](#)), except that conditions remain in the set until manually cleared.

Write “0” to clear historical flags (set in [AV401](#) but no longer set in [AV400](#)). Flags are also cleared when the meter resets. Active flags (still set in [AV400](#)) cannot be effectively cleared, since they will be immediately re-set.

## R Phase

### AV1140 Voltage Rating

R

Returns the CVT’s maximum rated RMS voltage. This always applies to the raw input voltage, measured between the CVT voltage leads without considering the *Voltage Multiplier* (see [AV1142](#)).

If the direct input voltage exceeds this rating, the *Over Voltage* condition (see [AV1400](#)) will be set. In *Over Voltage* conditions voltage, power, and energy measurements may have reduced accuracy.

**WARNING:** Exceeding the rated RMS voltage may result in hazardous operating conditions.

### AV1142 Voltage Multiplier

R/W/NV

Sets a multiplier to scale from raw input voltage to effective line voltage. Set equal to the ratio of any potential transformer used to step down voltages higher than the maximum rating. For example, set 35.0 when using a 4200:120 V potential transformer.

The *RMS Voltage* (see [AJ1420](#)) always returns the effective line voltage including the multiplier. Power and energy measurements scale by the same factor.

Negative multipliers can correct installations where CVT voltage leads are installed backwards:

- Has no effect on *RMS Voltage* (see [AJ1420](#)), which is always positive.
- Reverses the direction (import/export) of *Power Factor* (see [AJ1550](#)), *Real Power* (see [AJ1600](#)), and *Reactive Power* (see [AJ1640](#)).
- Adds 180° to *Current Angle* (see [AJ1540](#)), unless the *Current Multiplier* (see [AV1152](#)) is also negative, in which case the signs cancel.
- Adds 180° to both *Phase to Phase Voltage Angles* (see [AJ1440](#)) that include this phase, unless the other phase *Voltage Multiplier* (see [AV2142](#), [AV3142](#)) in the pair is also negative.

Default: 1.0

### AV1144 PowerPrint Voltage

R/W/NV

Sets the expected PowerPrint voltage. If set to any non-zero value, and *RMS Voltage* (see [AI1420](#)) differs from expected by more than the *PowerPrint Voltage Tolerance* (see [AV246](#)), then either the *Brown Out Voltage* or *Surge Voltage* conditions (see [AV1400](#)) will be set.

Set the expected voltage by writing this value directly, or by initializing *PowerPrint* (see [BV241](#)).

Default: 0 (undefined)

### AV1146 PowerPrint Voltage Angle

R/W/NV

Sets the expected PowerPrint relative voltage angle between this phase and the “next” (as defined for *Voltage Angle*, see [AI1440](#)). If both phases have a non-zero *PowerPrint Voltage* (see [AV1144](#)), and the relative *Voltage Angle* differs from the expected angle by more than the *Voltage Angle Tolerance* (see [AV248](#)), then the *Phase Drift* condition (see [AV1400](#)) will be set.

Set the expected angle by writing this value directly, or by initializing *PowerPrint* (see [BV241](#)).

Default: 0 (undefined)

### AV1150 Current Rating

R

Returns the CVT’s rated RMS current. This always applies to the raw input current measured in the Rogowski Coil loop without considering the *Current Multiplier* (see [AV1152](#)). The rating applies only at 60 Hz; ratings at other frequencies are inversely proportional (see [AI1520](#)).

If the raw input current exceeds this rating, the *Over Current* condition (see [AV1400](#)) may be set. However, this condition reflects the technology capability of the current sensing loop, which may be higher than rating in some cases. In *Over Current* conditions the current, power, and energy measurements may have reduced accuracy.

### AV1152 Current Multiplier

R/W/NV

Sets a multiplier to scale from raw input current to effective line current. Set the inverse of the number of times the conductor passes through the current sensor loop. For example, set 0.2 when the conductor wraps 5 times.

**WARNING:** Never deform the Rogowski Coil! Wrapping a conductor may increase accuracy when measuring very low currents, but may also reduce accuracy by deviating from the recommended installation procedure (see *Installation Instructions*). Performance specifications not guaranteed.

The *RMS Current* (see [AI1520](#)) always returns the effective line current including the multiplier. Power and energy measurements scale by the same factor.

Negative multipliers can correct installations where a current transducer is installed backwards:

- Has no effect on *RMS Current* (see [AI1420](#)), which is always positive.
- Reverses the direction (import/export) of *Power Factor* (see [AI1550](#)), *Real Power* (see [AI1600](#)), and *Reactive Power* (see [AI1660](#)).
- Adds 180° to *Current Angle* (see [AI1540](#)), unless the *Voltage Multiplier* (see [AV1142](#)) is also negative, in which case the signs cancel.

Default: 1.0

## AV1162 Power Multiplier

R/W/NV

Sets a multiplier to scale from raw input power to reported power. For example, set 3.0 to infer the other power and energy of all three phases of a balanced load while measuring just one. This way, the reported measurements have the correct magnitude and scale without any post-calculation.

**WARNING:** The less balanced the phases, the more this technique reduces measurement accuracy, especially for reactive power. However, the equipment and installation savings may be worthwhile when the primary objective is a relative/trend type measurement.

Negative multipliers reverse the direction (import/export) of *Power Factor* (see [AI1550](#)), *Real Power* (see [AI1600](#)), and *Reactive Power* (see [AI1640](#)).

Setting this value also sets the *Power Multiplier Override* ([BV1161](#)) to *Active*. To restore the default, set the *Power Multiplier Override* to *Inactive*.

Default: 1.0

## AV1192 Statistics Reset

W

Always returns 0. Write one of the following keys to reset some or all of the phase statistics. Writing any other value results in an error response.

**WARNING:** Selected statistics will be permanently lost; previous records cannot be recovered.

**NOTE:** Each phase has different keys, which are also different from the system reset keys. This guarantees that statistics cannot be accidentally reset by writing a key to the wrong object.

R Phase ([AV1192](#)):

- Write 7779749 to reset analog statistics ([AI1420](#) – [AI1672](#): *Minimum, Maximum, Average*)
- Write 5207141 to reset demand statistics ([AI1800](#) – [AI1866](#): *Minimum, Maximum*)
- Write 7564709 to clear accumulated energy ([ACC1700](#) – [ACC1766](#): *All Objects*)
- Write 6204517 to reset all R Phase statistics

S Phase ([AV2192](#)):

- Write 6600105 to reset analog statistics ([AI2420](#) – [AI2672](#): *Minimum, Maximum, Average*)
- Write 7173225 to reset demand statistics ([AI2800](#) – [AI2866](#): *Minimum, Maximum*)
- Write 4287913 to clear accumulated energy ([ACC2700](#) – [ACC2766](#): *All Objects*)
- Write 6073449 to reset all S Phase statistics

T Phase ([AV3192](#)):

- Write 4240817 to reset analog statistics ([AI3420](#) – [AI3672](#): *Minimum, Maximum, Average*)
- Write 4813937 to reset demand statistics ([AI3800](#) – [AI3866](#): *Minimum, Maximum*)
- Write 6516145 to clear accumulated energy ([ACC3700](#) – [ACC3766](#): *All Objects*)
- Write 4369521 to reset all T Phase statistics

Phase statistics may also be reset by a *System Statistics Reset* (see [AV192](#)). Analog statistics are automatically reset whenever the meter itself resets (see [AV103](#)). Individual analog and demand statistics may also be automatically reset when *Auto Reset Statistics* is *Active* (see [BV195](#)).

Resetting any subset of accumulated energy increments the *Energy Reset Count* (see [AV194](#)).



**AV1400 Active Conditions**

**R**

Returns an encoded set of flags representing active phase conditions:

- *Sensor Fault* (see [MSV1103](#)) BIT [0] 1
- *No Load* (see [AI1600](#)) BIT [1] 2
- *Negative Power* (see [AI1600](#)) BIT [2] 4
- *Phase Loss* (see [AI1420](#)) BIT [3] 8
- *Bad Frequency* (see [AI1420](#)) BIT [4] 16
- *Low Power Factor* (see [AI1550](#)) BIT [5] 32
- *Over Current* (see [AV1150](#)) BIT [6] 64
- *Over Voltage* (see [AV1140](#)) BIT [7] 128
- *High Harmonics* (see [AI1520](#)) BIT [8] 256
- *Unexpected Sensor* (see [MSV1104](#))\* BIT [9] 512
- *Missing Sensor* (see [MSV1104](#))\* BIT [10] 1024
- *Surge Voltage* (see [AV1144](#))\* BIT [11] 2048
- *Brown Out Voltage* (see [AV1144](#))\* BIT [13] 8192

The conditions reflect the near-real-time phase status observed over the previous 1 – 2 seconds. The CVT Status LED also indicates the active conditions (see *Installation Instructions*).

If no CVT is installed, always returns “0”. To decode a set of condition flags, see [Appendix A](#).

\*Conditions only reported after activating the corresponding PowerPrint feature(s).

**AV1401 Previous Conditions**

**R/W0**

Returns an encoded set of flags representing all active and historical phase conditions. Equivalent to *Active Conditions* (see [AV1400](#)), except that conditions remain in the set until manually cleared.

Write “0” to clear historical flags (set in [AV1401](#) but no longer set in [AV1400](#)). Flags are also cleared when the meter resets. Active flags (still set in [AV1400](#)) cannot be effectively cleared, since they will be immediately re-set.

**S Phase**

---

**AV2000 – AV2999**

S Phase *Analog Values* parallel the R Phase, offset +1000.

For example, read AV2140 for the *S Phase Voltage Rating*.

**T Phase**

---

**AV3000 – AV3999**

T Phase *Analog Values* parallel the R Phase, offset +2000.

For example, read AV3140 for the *T Phase Voltage Rating*.



# Binary Inputs

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Status Flags	R	
• Event State	R	Always <i>Normal</i>
• <b>Reliability</b>	<b>W</b>	Only writable when <i>Out Of Service</i> is <i>True</i>
• Out of Service	<b>W</b>	
• Polarity	R	
• <b>Inactive Text</b>	<b>R</b>	
• <b>Active Text</b>	<b>R</b>	
• <b>Change of State Time</b>	<b>R</b>	Only valid if the system time is valid
• <b>Change of State Count</b>	<b>W</b>	Write 0 to reset
• <b>Time of State Count Reset</b>	<b>R</b>	Only valid if the system time is valid
• <b>Elapsed Active Time</b>	<b>W</b>	Write 0 to reset
• <b>Time of Active Time Reset</b>	<b>R</b>	Only valid if the system time is valid
• Property List	R	

## BI200 Setup Button

R

Returns *Active* when the *Setup Button* (see *Installation Instructions*) is pressed.

This value may be useful for protocol testing. Regardless of the value returned, the *Setup Button* always performs its normal function for diagnostics and configuration.

## BI201 Binary Input 1

R

## BI202 Binary Input 2

R

Returns the current stable state of the corresponding pulse input (active low; see *Installation Instructions*). The *Pulse Input Debounce Time* (see [AV208](#)) sets the minimum stability requirement for each transition.

This value may be useful if the pulse input is connected to a discrete contact, such as an alarm, to trigger additional controller actions. If so, the corresponding *Pulse Input* count (see [ACC210](#), [ACC220](#)) may be ignored.

One of the binary inputs may be selected as the source for *Demand Window Synchronization* (see [MSV181](#)).

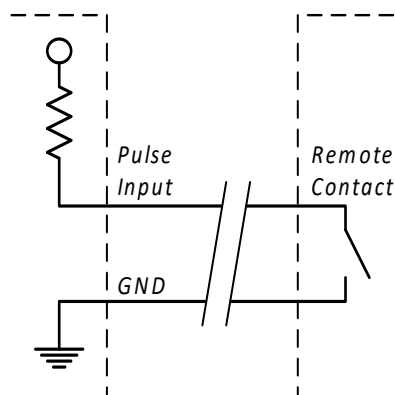


Figure 18: Binary Input Wiring

# Binary Values

---

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	W	
• Status Flags	R	
• Event State	R	<i>Always Normal</i>
• <b>Reliability</b>	<b>R</b>	<i>Always No Fault Detected</i>
• Out of Service	R	<i>Always False</i>
• <b>Inactive Text</b>	<b>R</b>	
• <b>Active Text</b>	<b>R</b>	
• Property List	R	

## System

---

### BV111 Identify Meter

**R/W**

Sets the LED status interface into a visually identifiable mode. When set to *Active*, all status LEDs (see *Installation Guide*) begin slowly blinking green together. This pattern is distinct from any other interface pattern the meter may display during normal operation. The LEDs will remain in identify mode until reset to *Inactive* or the *Setup Button* is pressed.

This feature may be useful if several meters are connected on a single network and the association between discovered device IDs and physical meters is uncertain (also see the [Device Serial Number](#)).

Default: *Inactive* (normal LEDs)

### BV112 Auto Protocol

**R/W/NV**

Sets the state of automatic protocol detection. When *Active*, the RS485 receiver initially allows frames of any supported protocol. On establishing confidence in a particular protocol (about 10 consecutive frames of the same type), this becomes the preferred *RS485 Protocol* (see [MSV122](#)).

Generally, having a preferred protocol disallows other protocols. This reduces uncertainty in the unlikely event that a particular frame or sequence could be interpreted as more than one protocol. However, should the protocol really change (e.g. by moving the meter to a different network), the meter will eventually lose confidence in the preferred protocol. After temporarily allowing all protocols, automatic protocol detection will establish a new preference. To avoid the delays associated with changing protocol, set the *RS485 Protocol* to some option that permanently allows multiple protocols.

When changing this value, the meter keeps the current *RS485 Protocol* to avoid communication loss. Setting *Inactive* disables further automatic protocol changes and only allows the protocol(s) specifically set in *RS485 Protocol*.

Default: *Active*

**BV113 Auto MAC Address****R/W/NV**

Sets the state of the automatic address selection. When *Active*, the *MAC Address* (see [AV123](#)) has been automatically selected from a pool of unused MS/TP master addresses (see [Configuration](#)). When changing this value, the meter keeps the current *MAC Address* to avoid communication loss.

Default: *Active*

**BV114 Auto Baud Rate****R/W/NV**

Sets the state of automatic baud rate detection. When *Active*, the meter may automatically change the *Baud Rate* (see [AV124](#)) in response to RS485 communication errors. When changing this value, the meter keeps the current *Baud Rate* to avoid communication loss.

**IMPORTANT:** If *Active*, the meter will not create an MS/TP token on an idle line. Typically, an MS/TP master (see [AV123](#)) with the smallest *MAC Address* creates a token after about 500 milliseconds to build an orderly token ring. However, allowing the meter to create a token on an idle line could obstruct a controller attempting to force a switch to a new baud rate.

In all other cases, the meter follows standard BACnet token passing rules. To also force standard behavior on an idle line, set *Auto Baud Rate* to *Inactive*.

Default: *Active*

**BV116 Auto Parity****R/W/NV**

Sets the state of automatic parity detection. When *Active*, the meter may automatically change the *Parity* (see [MSV126](#)) in response to RS485 communication errors. When changing this value, the meter keeps the current *Parity* to avoid communication loss.

Default: *Active*

**BV195 Auto Reset Statistics****R/W/NV**

Sets the reset mode for statistical measurements (*Minimum*, *Maximum*, *Average*). When *Active*, reading an individual statistical measurement also resets it, as if it had been followed by a write of 0 (see [Analog Inputs](#)).

Auto reset mode may be useful in some low-overhead remote logging installations.

**WARNING:** When using *Auto Reset Statistics* as part of a periodic process, ensure there are no extra reads generated between logging intervals. Otherwise, the resulting records may reflect only a portion of the intended interval.

Default: *Inactive*

**BV197 Simple Mode****R/W/NV**

Sets the number of points available for discovery. When *Active* the device will be in Simple Mode, which is an abbreviated list of the most commonly used points (see [Appendix B](#)). When *Inactive* the device is in Advanced Mode which allows ALL points to be available for discovery.

Default: *Model Dependent*, *RPM Models = Simple Mode*, *All Other Models = Advanced Mode*

**BV240 PowerPrint Alarm****R**

Returns *Active* when any of the PowerPrint conditions are active:

- *Frequency Drift* (see [AV242](#), [AV400](#))
- *Phase Angle Drift* (see [AV1146](#), [AV400](#))
- *Brown Out Voltage* (see [AV1144](#), [AV1400](#))
- *Surge Voltage* (see [AV1144](#), [AV1400](#))
- *Unexpected Sensor* (see [MSV1104](#), [AV1400](#))

Review associated conditions and measurements to determine the source of any anomaly and appropriate actions. Once triggered, the *Alarm* remains *Active* for as long as any PowerPrint condition remains active, plus an additional 10 seconds.

## BV241 PowerPrint

R/W/NV

Returns *Active* if at least one of the PowerPrint reference parameters has been set.

- *Frequency* (see [AV242](#))
- *Voltage* (see [AV1144](#))
- *Voltage Angle* (see [AV1146](#))
- *Identity* (see [MSV1104](#))

Setting *Inactive* clears all of the reference parameters at once. Setting *Active* while *Inactive* initializes PowerPrint (if already *Active*, setting *Active* has no effect). When activated this way, PowerPrint initializes all of the reference parameters at once:

- Sets the expected frequency to exactly 50 Hz or 60 Hz if the measured *Frequency* (see [AI410](#)) is within the *Frequency Tolerance* (see [AV244](#)); otherwise leaves expected frequency undefined.
- Sets the expected voltage for each phase equal to the measured *RMS Voltage* (see [AI1420](#)) if the measured voltage is not detecting the *Phase Loss* condition.
- Sets the expected voltage angle between each phase and the next equal to the measured angle (see [AI1440](#)) if neither phase is detecting the *Phase Loss* condition.
- Sets the reference identity for each phase CVT if the *Status* (see [MSV1103](#)) is *No Fault Detected*.

May return a BACnet *Internal Error* if no PowerPrint parameters could be set (e.g. no CVTs installed).

Default: *Inactive*

## R Phase

---

### BV1102 CVT Present

R

Returns *Active* when the meter detects a connected CVT. For more detailed diagnostic information, read the *CVT Status* (see [MSV1103](#)). If *Inactive*, *Status* returns *No Sensor*.

### BV1161 Power Multiplier Override

R/W/NV

Returns the status of the phase *Power Multiplier* (see [AV1162](#)). *Inactive* indicates the default multiplier; *Active* indicates an override. Setting *Inactive* resets the *Power Multiplier* to default.

Default: *Inactive*

## S Phase

---

### BV2000 – BV2999

S Phase *Binary Values* parallel the R Phase, offset +1000.

For example, read BV2102 for *S Phase Present*.

## T Phase

---

### **BV3000 – BV3999**

T Phase *Binary Values* parallel the R Phase, offset +2000.

For example, read BV3102 for *T Phase Present*.

# Multi State Values

---

• Object Identifier	R	
• Object Name	R	
• Object Type	R	
• Present Value	<b>W</b>	
• Status Flags	R	
• Event State	R	<i>Always Normal</i>
• <b>Reliability</b>	<b>R</b>	<i>Always No Fault Detected</i>
• Out of Service	R	<i>Always False</i>
• Number of States	R	
• <b>State Text</b>	<b>R</b>	
• Property List	R	

Unless otherwise specified, changes to RS485 parameters are effective after the response (i.e. a client must maintain the original parameters for the remainder of the current transaction).

## System

---

### MSV122 RS485 Protocol R/W/NV

Sets the communication protocol(s):

- |                        |                                   |
|------------------------|-----------------------------------|
| 1. <i>Auto</i>         | 5. <i>BACnet and Modbus RTU</i>   |
| 2. <i>BACnet</i>       | 6. <i>BACnet and Modbus ASCII</i> |
| 3. <i>Modbus RTU</i>   | 7. <i>Modbus RTU and ASCII</i>    |
| 4. <i>Modbus ASCII</i> | 8. <i>Any Protocol</i>            |

If *Auto Protocol* is *Active* (see [BV1.12](#)), returns the auto-detected protocol (typically *BACnet*). Otherwise, returns the user-configured protocol option.

Setting any value other than *Auto* also sets *Auto Protocol* to *Inactive*. Setting *Auto* copies any previously set protocol option to the automatic protocol detector and sets *Auto Protocol* to *Active*. Setting an option with multiple protocols (5 – 8) reduces the *Auto Protocol* re-detection delay.

Default: *Auto*

### MSV126 RS485 Parity R/W/NV

Sets the communication parity:

1. *Auto*
2. *No Parity*
3. *Odd Parity*
4. *Even Parity*

If *Auto Parity* is *Active* (see [BV1.16](#)), returns the auto-detected parity (typically *No Parity* for *BACnet*). Otherwise, returns the user-configured parity option.

Setting any value other than *Auto* sets *Auto Parity* to *Inactive*. Setting *Auto* sets *Auto Parity* to *Active*, but keeps the current parity option to avoid loss of communication.

Default: *Auto*

### MSV133 Temperature Units

R/W/NV

Sets the preferred units for temperature values:

1. *Degrees Fahrenheit* (°F)
2. *Degrees Celsius* (°C)

Verify the setting by reading the *Units of Measure* of the temperature object (see [AI310](#)). Saved statistical values automatically convert when the selected unit changes.

Default: *Degrees Fahrenheit*

### MSV152 System Current Sensor Technology

R

Returns the overall current sensor technology of the CVT(s) installed with a meter. This value is provided in anticipation of future CVT technology upgrades:

1. *Unknown Technology*
2. *Conflicted Technology*
3. *Multiple Technology*
4. *Rogowski Coil*
5. *Current Transformer*

This value derives from the combination of the *Current Sensor Technology* (see [MSV1.154](#)) of each CVT. All CVTs installed with a single meter must be compatible for proper operation.

Read only. At EM-RS485 launch, all Senva CVTs are based on *Rogowski Coil* technology. If no CVTs are installed, returns *Unknown Technology*.

### MSV153 Angle Units

R/W/NV

Sets the preferred units for angle values:

1. *Degrees*
2. *Radians*

Verify the setting by reading the *Units of Measure* of any angle object (e.g. [AI540](#)). Saved statistical values automatically convert when the selected unit changes.

Default: *Degrees*

### MSV161 System Phase Selection

R/W/NV

Sets the phase selection mask for system measurements:

1. *3 Phase*
2. *R Phase and S Phase*
3. *S Phase and T Phase*
4. *R Phase and T Phase*

System measurements, including phase averages (e.g. [AI420](#)) and accumulations (e.g. [ACC700](#)), are based on the selected phases only. Set this value in case of a split system (e.g. 2 CVTs measuring a 2-phase system input with a third CVT measuring a separate branch load). There are no equivalent options for single phase, as individual phase measurements are always accessible.

For consistency, consider resetting the system statistics (see [AV192](#)) after changing this setting.

Default: *3 Phase*

## MSV162 Power Spectrum

R/W/NV

Sets the bandwidth of real and reactive power and energy measurements:

1. *Wideband*
2. *Fundamental*

Generally, harmonic components are the result of non-linear distortions in the generator or the load. In *Wideband* mode, measurements include power of all harmonic components (e.g. 3<sup>rd</sup>, 5<sup>th</sup>), up to the cutoff frequency (see *Installation Instructions*). In *Fundamental* mode, measurements include only power in the fundamental Frequency (see [AI410](#)).

**NOTE:** Harmonic power requires matched frequency components in the spectrum of both voltage and current. For example, given a 5<sup>th</sup> harmonic of current, there must be a corresponding 5<sup>th</sup> harmonic of voltage. Otherwise, even though distortion power increases, the real and reactive components of power cancel leaving only the power in the fundamental.

For consistency, consider resetting accumulated energy (see [AV192](#)) after changing this setting.

Default: *Wideband*

## MSV163 Power Units

R/W/NV

Sets the preferred units for power and demand power values:

1. *Kilowatts*
2. *Watts*
3. *Megawatts*

Verify the setting by reading the *Units of Measure* of any power object (e.g. [AI600](#)). Saved statistical values, included maximum demand power, automatically convert when the selected unit changes.

The options specify real power units only. Reactive and apparent power always follow the real power scale, as shown in each column:

	Relative Scale = 1.0	1,000	1,000,000
<b>Real Power</b>	W (Watts)	kW	MW
<b>Reactive Power</b>	VAR (Volt-Amps Reactive)	kVAR	MVAR
<b>Apparent Power</b>	VA (Volt-Amps)	kVA	MVA

Default: *Kilowatts*

## MSV173 Energy Units

R/W/NV

Sets the preferred units for accumulated energy values:

1. *Kilowatt Hours*
2. *Watt Hours*
3. *Megawatt Hours*

Verify the setting by reading the *Units of Measure* of any energy object (e.g. [ACC700](#)). Accumulated energy automatically converts with no loss when the selected unit changes.

The options specify real energy units only. Reactive and apparent energy always follow the real energy scale, as shown in each column:

	Relative Scale = 1.0	1,000	1,000,000
<b>Real Energy</b>	Wh (Watt hours)	kWh	MWh
<b>Reactive Energy</b>	VARh (Volt-Amp Reactive hours)	kVARh	MVARh
<b>Apparent Energy</b>	VAh (Volt-Amp hours)	kVAh	MVAh

Default: *Kilowatt Hours*



## MSV181 Demand Synchronization Mode

R/W/NV

Sets the synchronization mode for the demand window:

1. *No Synchronization*
2. *Setup Button*
3. *Binary Input 1 (falling)*
4. *Binary Input 1 (rising)*
5. *Binary Input 2 (falling)*
6. *Binary Input 2 (rising)*
7. *Every Hour*
8. *Every Day*

Selecting any of the synchronization sources allows the internal window to be aligned to some external reference (Figure 19B). When a synchronization event is detected, the current window ends immediately and a new window begins. Synchronization events occur exactly once when the selected condition is detected. Synchronization cannot re-occur until the condition is removed and redetected, no matter how long it may be maintained.

In *No Synchronization* mode, the *Elapsed Demand Window* (see [AV184](#)) counts time continuously, only restarting if the meter itself restarts (Figure 19A). When the counter reaches the full *Demand Window Time* (see [AV183](#)), the current demand window ends and a new window begins.

In *Setup Button* (see [BI200](#)) mode, synchronization occurs as soon as the button is pressed. The *Setup Button* always performs its normal function. If there are any active diagnostic conditions, it may be necessary to exit diagnostic mode after pressing the button (see *Installation Instructions*). To avoid a second synchronization, wait for diagnostic mode to time out (about 60 seconds).

In *Binary Input* (see [BI201](#), [BI202](#)) mode, *Falling Edge* synchronization occurs when an external contact pulls the pulse input to GND (active low, see Figure 18). *Rising Edge* synchronization occurs in the opposite condition, when an external contact opens. The *Debounce Time* (see [AV208](#)) may delay the synchronization up to 250 milliseconds after the transition. This mode may be useful to align demand windows with a utility meter that provides a regular synchronization pulse.

In *Every Hour* or *Every Day* mode, synchronization requires an initial BACnet *Time Synchronization* set the internal clock, and periodic broadcasts to correct small clock drift. If the *Time Synchronization* broadcasts are not maintained, performance will eventually be equivalent to *No Synchronization*. Also in *Every Day* mode, a specific hour of the day may be selected (see [AV182](#)).

For *Full Synchronization*, relying exclusively on an external trigger, disable the internal window time by setting the *Demand Window Time* to 0 minutes (Figure 19C).

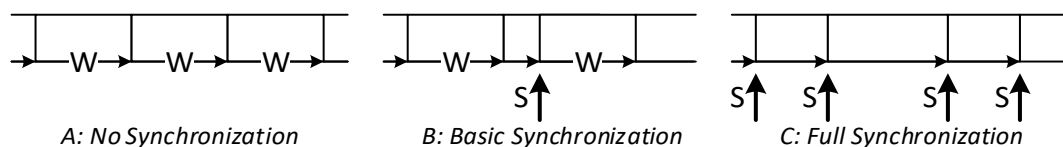


Figure 19: Synchronization Modes

**NOTE:** Consider synchronizing when the average power is typically light (e.g. midnight). When a synchronization event is detected, it makes no difference how much or little time has elapsed in the current window. Average power may be more volatile if the window has only just started, being measured over a shorter period of time.

Default: *No Synchronization*

---

## R Phase

### MSV1103 CVT Status

R

Returns general CVT status:

1. *No CVT*
2. *No Error*
3. *Detection Error*
4. *Communication Error*
5. *Configuration Error*
6. *Version Error*
7. *Technology Error*

Any *Error* status causes the *Sensor Fault* (see [AV1400](#)) condition to be set. In this case, all of the individual phase measurements (see [AI1420](#) ff.) are marked invalid. In addition, the phase carries no weight in the system average calculations (see [AI420](#) ff.). Previous phase statistics and energy accumulations are preserved.

Typically, errors result from an unreliable cable connection between the EM-RS485 and a CVT. Disconnect the CVT from the meter and inspect the cable and connector for damage. If an error persists when the CVT is reconnected, please contact technical support.

At EM-RS485 launch, all Senva CVTs are based on *Rogowski Coil* technology; *Technology Error* is provided in anticipation of future CVT technology upgrades.

### MSV1104 PowerPrint Identity Status

R/W/NV

Sets the status of the CVT's PowerPrint identity:

1. *No Identity*
2. *Identity Saved*
3. *Identity Error*

The PowerPrint identity captures the digital identity of the installed CVT for reference. To initialize or update the PowerPrint identity, activate *PowerPrint* (see [BV241](#)) or write *Identity Saved*. To clear any saved identity, write *No Identity* or disable *PowerPrint*.

Returns *Identity Saved* when the CVT identity matches the reference identity. Returns *Identity Error* when it appears that the CVT has been removed or swapped with a different one. In the latter case, PowerPrint also sets the *Unexpected Sensor* and/or the *Missing Sensor* conditions (see [AV1400](#)).

Default: *No Identity*

### MSV1154 Current Sensor Technology

R

Returns the current sensor technology of the CVT:

1. *Unknown Technology*
2. *Rogowski Coil*
3. *Current Transformer*

Read only. If no CVT is installed, returns *Unknown Technology*.

At EM-RS485 launch, all Senva CVTs are based on *Rogowski Coil* technology. The combination of the technology of all installed CVTs gives the *System Current Sensor Technology* ([MSV152](#)).

## S Phase

---

### **MSV2000 – MSV2999**

S Phase *Multi State Values* parallel the R Phase, offset +1000.

For example, read MSV2103 for the *S Phase Status*.

## T Phase

---

### **MSV3000 – MSV3999**

T Phase *Multi State Values* parallel the R Phase, offset +2000.

For example, read MSV3103 for the *T Phase Status*.

# Character String Values

---

- |                         |          |                                 |
|-------------------------|----------|---------------------------------|
| • Object Identifier     | R        |                                 |
| • Object Name           | R        |                                 |
| • Object Type           | R        |                                 |
| • Present Value         | R        |                                 |
| • Status Flags          | R        |                                 |
| • <b>Event State</b>    | <b>R</b> | <i>Always Normal</i>            |
| • <b>Reliability</b>    | <b>R</b> | <i>Always No Fault Detected</i> |
| • <b>Out of Service</b> | <b>R</b> | <i>Always False</i>             |
| • Property List         | R        |                                 |

## R Phase

---

- |   |                          |          |
|---|--------------------------|----------|
| <b>CH1010</b>   | <b>CVT Serial Number</b> | <b>R</b> |
| Returns the unique serial number of the CVT. With no CVT installed, returns "000000". |                          |          |
| <b>CH1020</b>   | <b>CVT Model</b>         | <b>R</b> |
| Returns the full model of the CVT. With no CVT installed, returns "NO SENSOR".        |                          |          |

## S Phase

---

- CH2000 – CH2999**  
S Phase *Character String Values* parallel the R Phase, offset +1000.  
For example, read CH2020 for the *S Phase Model*.

## T Phase

---

- CH3000 – CH3999**  
T Phase *Character String Values* parallel the R Phase, offset +2000.  
For example, read CH3020 for the *T Phase Model*.

# Files

---

- |                      |   |                             |
|----------------------|---|-----------------------------|
| • Object Identifier  | R |                             |
| • Object Name        | R |                             |
| • Object Type        | R |                             |
| • File Type          | R |                             |
| • File Size          | R |                             |
| • Modification Date  | R |                             |
| • Archive            | W |                             |
| • Read Only          | R | <i>Always True</i>          |
| • File Access Method | R | <i>Always Stream Access</i> |
| • Property List      | R |                             |

## **F25000 User Configuration**

**R**

Returns a copy of the non-volatile configuration (read only). Senva technical support may request a copy of the file contents to diagnose field installation problems.

# Appendix A: Condition Flags Decoding

Reading the condition flag objects (see [AV400](#), [AV1400](#)) always returns some positive integer  $R$  encoding a set  $C$  of one or more conditions. Conditions are encoded in binary form, with the interpretation of bits varying between objects. Undefined bits are reserved.

Follow this iterative procedure to find  $C$  given any value  $R$ :

1. Initialize  $C = \{ \}$  (the empty set)
2. Initialize  $X = 2^{15} = 32768$
3. If ( $R < X$ ), skip to step 6
4. Subtract  $X$  from  $R$
5. If the object defines condition  $X$ , add that to  $C$ . Otherwise, skip.
6. Divide  $X$  by 2 (move to the next smaller bit)
7. If ( $X > 1$ ), repeat steps 3

For example, if [AV1400](#)  $R = 3108$ , then  $C = \{ \text{Negative Power, Low Power Factor, Surge Voltage} \}$ :

Repetition	Step 3	Step 4	Step 5
1. $R = 3108$ $X = 32768$	TRUE		
2. $R = 3108$ $X = 16384$	TRUE		
3. $R = 3108$ $X = 8192$	TRUE		
4. $R = 3108$ $X = 4096$	TRUE		
5. $R = 3108$ $X = 2048$	FALSE	$R = 1060$	$C = C \cup \{ \text{Surge Voltage} \}$
6. $R = 1060$ $X = 1024$	FALSE	$R = 36$	skip $\{ \text{Reserved Condition} \}$
7. $R = 36$ $X = 512$	TRUE		
8. $R = 36$ $X = 256$	TRUE		
9. $R = 36$ $X = 128$	TRUE		
10. $R = 36$ $X = 64$	TRUE		
11. $R = 36$ $X = 32$	FALSE	$R = 4$	$C = C \cup \{ \text{Low Power Factor} \}$
12. $R = 4$ $X = 16$	TRUE		
13. $R = 4$ $X = 8$	TRUE		
14. $R = 4$ $X = 4$	FALSE	$R = 0$	$C = C \cup \{ \text{Negative Power} \}$
15. $R = 0$ $X = 2$	TRUE		
16. $R = 0$ $X = 1$	TRUE		

An uncompensated PV array may explain this particular set of conditions:

- The *Negative Power* condition may indicate that real power generation exceeds consumption, at least momentarily.
- The *Low Power Factor* condition may indicate a large reactive power, at least when compared to the net real power (assuming that the PV array does not generate reactive power).
- The *Surge Voltage* condition may indicate a too-small *PowerPrint Voltage Tolerance* (see [AV246](#)), not accounting for the voltage boost required to return power back to the grid.

## Appendix B: Simple Mode Point List

---

Type	Point	Description/Object Identifier	R/W	Units	Range
AV	1	Configuration	R/W	n/a	0 to 4.294967e9
AV	3	R Phase Current Rating	R/W	Amps	0 to 1000000
AV	4	CT Ratio Secondary	R/W	1/Volts	0 to 4.294967e9
AV	5	R Phase Voltage Multiplier	R/W	Value	-1000000 to 1000000
AV	6	System Voltage	R/W	v	90 to 32000
AV	8	Power Print Voltage Tolerance	R/W	Percent	0 to 100
AI	1	Total Real Energy (AI)	R	kWh	0 to 1e9
AI	2	Total Real Power	R	kW	-180 to 180
AI	3	Total Reactive Power	R	kVAR	-180 to 180
AI	4	Total Apparent Power	R	kVA	0 to 180
AI	5	System Power Factor	R	pf	0 to 1
AI	6	Phase to Phase Average RMS Voltage	R	V	0 to 600
AI	7	Phase Average RMS Voltage	R	V	0 to 600
AI	8	Phase Average RMS Current	R	amps	0 to 300
AI	9	R Phase Real Power	R	kW	-System Max Power to System Max Power (AI45)
AI	10	S Phase Real Power	R	kW	-System Max Power to System Max Power (AI45)
AI	11	T Phase Real Power	R	kW	-System Max Power to System Max Power (AI45)
AI	12	R Phase Power Factor	R	pf	0 to 1
AI	13	S Phase Power Factor	R	pf	0 to 1
AI	14	T Phase Power Factor	R	pf	0 to 1
AI	15	R to S Phase RMS Voltage	R	V	0 to 600
AI	16	S to T Phase RMS Voltage	R	V	0 to 600
AI	17	T to R phase RMS Voltage	R	V	0 to 600
AI	18	R Phase RMS Voltage	R	V	0 to 600
AI	19	S Phase RMS Voltage	R	V	0 to 600
AI	20	T Phase RMS Voltage	R	V	0 to 600
AI	21	R Phase RMS Current	R	Amps	0 to 300
AI	22	S Phase RMS Current	R	Amps	0 to 300

AI	23	T Phase RMS Current	R	Amps	0 to 300
AI	25	Line Frequency	R	Hz	38 to 150
AI	26	Total Apparent Energy (AI)	R	240	0 to 1e9
AI	27	Total Reactive Energy (AI)	R	243	0 to 1e9
AI	28	R Phase Apparent Power	R	kVA	0 to 180
AI	29	S Phase Apparent Power	R	kVA	0 to 180
AI	30	T Phase Apparent Power	R	kVA	0 to 180
AI	31	R Phase Reactive Power	R	kVAR	-System Max Power to System Max Power (AI45)
AI	32	S Phase Reactive Power	R	kVAR	-System Max Power to System Max Power (AI45)
AI	33	T Phase Reactive Powere	R	kVAR	-System Max Power to System Max Power (AI45)
AI	34	Demand Total Real Power	R	kW	-System Max Power to System Max Power (AI45)
AI	35	Demand Total Reactive Power	R	kVAR	-System Max Power to System Max Power (AI45)
AI	36	Demand Total Apparent Power	R	kVA	-System Max Power to System Max Power (AI45)
AI	37	Maximum Demand Total Real Power	R	kW	-System Max Power to System Max Power (AI45)
AI	38	Maximum Demand Total Reactive Power	R	kVAR	-System Max Power to System Max Power (AI45)
AI	39	Maximum Demand Total Apparent Power	R	kVA	-System Max Power to System Max Power (AI45)
AI	40	Pulse Input 1	R	#	0 to 3000
AI	41	Pulse Input 2	R	#	0 to 3000
AI	42	Total R Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	43	Total S Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	44	Total T Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	45	Theoretical System Maximum Power	R	kW	CVT Dependent
AI	47	Energy Reset Count	R	0 to 32700	
AI	50	Reset Count	R	0 to 32700	
AI	52	Alarm Bitmap	R	0 to 32700	
BI	1	R Phase Voltage Out of Range	R		0=Inactive, 1=Active



BI	2	S Phase Voltage Out of Range	R		0=Inactive, 1=Active
BI	3	T Phase Voltage Out of Range	R		0=Inactive, 1=Active
BI	4	R Phase Current Out of Range	R		0=Inactive, 1=Active
BI	5	S Phase Current Out of Range	R		0=Inactive, 1=Active
BI	6	T Phase Current Out of Range	R		0=Inactive, 1=Active
BI	7	Frequency Out of Range	R		0=Inactive, 1=Active
BI	9	R Phase Phase Loss	R		0=Inactive, 1=Active
BI	10	S Phase Phase Loss	R		0=Inactive, 1=Active
BI	11	T Phase Phase Loss	R		0=Inactive, 1=Active
BI	12	R Phase Low Power Factor	R		0=Inactive, 1=Active
BI	13	S Phase Low Power Factor	R		0=Inactive, 1=Active
BI	14	T Phase Low Power Factor	R		0=Inactive, 1=Active
BV	197	Simple/Advanced Mode	R/W		0 = Advanced, 1 = Simple

Type	Point	Description/Object Identifier	R/W	Units	Range
AV	1	Configuration	R/W	n/a	0 to 4.294967e9
AV	3	R Phase Current Rating	R/W	Amps	0 to 1000000
AV	4	CT Ratio Secondary	R/W	1/Volts	0 to 4.294967e9
AV	5	R Phase Voltage Multiplier	R/W	Value	-1000000 to 1000000
AV	6	System Voltage	R/W	v	90 to 32000
AV	8	Power Print Voltage Tolerance	R/W	Percent	0 to 100
AI	1	Total Real Energy (AI)	R	kWh	0 to 1e9
AI	2	Total Real Power	R	kW	-180 to 180
AI	3	Total Reactive Power	R	kVAR	-180 to 180
AI	4	Total Apparent Power	R	kVA	0 to 180
AI	5	System Power Factor	R	pf	0 to 1
AI	6	Phase to Phase Average RMS Voltage	R	V	0 to 600
AI	7	Phase Average RMS Voltage	R	V	0 to 600
AI	8	Phase Average RMS Current	R	amps	0 to 300
AI	9	R Phase Real Power	R	kW	-System Max Power to System Max Pow
AI	10	S Phase Real Power	R	kW	-System Max Power to System Max Pow
AI	11	T Phase Real Power	R	kW	-System Max Power to System Max Pow
AI	12	R Phase Power Factor	R	pf	0 to 1
AI	13	S Phase Power Factor	R	pf	0 to 1
AI	14	T Phase Power Factor	R	pf	0 to 1
AI	15	R to S Phase RMS Voltage	R	V	0 to 600
AI	16	S to T Phase RMS Voltage	R	V	0 to 600
AI	17	T to R phase RMS Voltage	R	V	0 to 600

AI	18	R Phase RMS Voltage	R	V	0 to 600
AI	19	S Phase RMS Voltage	R	V	0 to 600
AI	20	T Phase RMS Voltage	R	V	0 to 600
AI	21	R Phase RMS Current	R	Amps	0 to 300
AI	22	S Phase RMS Current	R	Amps	0 to 300
AI	23	T Phase RMS Current	R	Amps	0 to 300
AI	25	Line Frequency	R	Hz	38 to 150
AI	26	Total Apparent Energy (AI)	R	240	0 to 1e9
AI	27	Total Reactive Energy (AI)	R	243	0 to 1e9
AI	28	R Phase Apparent Power	R	kVA	0 to 180
AI	29	S Phase Apparent Power	R	kVA	0 to 180
AI	30	T Phase Apparent Power	R	kVA	0 to 180
AI	31	R Phase Reactive Power	R	kVAR	-System Max Power to System Max Pow
AI	32	S Phase Reactive Power	R	kVAR	-System Max Power to System Max Pow
AI	33	T Phase Reactive Powre	R	kVAR	-System Max Power to System Max Pow
AI	34	Demand Total Real Power	R	kW	-System Max Power to System Max Pow
AI	35	Demand Total Reactive Power	R	kVAR	-System Max Power to System Max Pow
AI	36	Demand Total Apparent Power	R	kVA	-System Max Power to System Max Pow
AI	37	Maximum Demand Total Real Power	R	kW	-System Max Power to System Max Pow
AI	38	Maximum Demand Total Reactive Power	R	kVAR	-System Max Power to System Max Pow
AI	39	Maximum Demand Total Apparent Power	R	kVA	-System Max Power to System Max Pow
AI	40	Pulse Input 1	R	#	0 to 3000
AI	41	Pulse Input 2	R	#	0 to 3000
AI	42	Total R Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	43	Total S Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	44	Total T Phase Real Energy (AI)	R	kWh	0 to 1e9
AI	45	Theoretical System Maximum Power	R	kW	CVT Dependent
AI	47	Energy Reset Count	R	0 to 32700	
AI	50	Reset Count	R	0 to 32700	
AI	52	Alarm Bitmap	R	0 to 32700	
BI	1	R Phase Voltage Out of Range	R		0=Inactive, 1=Active
BI	2	S Phase Voltage Out of Range	R		0=Inactive, 1=Active
BI	3	T Phase Voltage Out of Range	R		0=Inactive, 1=Active
BI	4	R Phase Current Out of Range	R		0=Inactive, 1=Active
BI	5	S Phase Current Out of Range	R		0=Inactive, 1=Active
BI	6	T Phase Current Out of Range	R		0=Inactive, 1=Active
BI	7	Frequency Out of Range	R		0=Inactive, 1=Active
BI	9	R Phase Phase Loss	R		0=Inactive, 1=Active

BI	10	S Phase Phase Loss	R		0=Inactive, 1=Active
BI	11	T Phase Phase Loss	R		0=Inactive, 1=Active
BI	12	R Phase Low Power Factor	R		0=Inactive, 1=Active
BI	13	S Phase Low Power Factor	R		0=Inactive, 1=Active
BI	14	T Phase Low Power Factor	R		0=Inactive, 1=Active
BV	197	Simple/Advanced Mode	R/W		0 = Advanced, 1 = Simple