


# APPLICATION NOTE

## SENA CO2R ROOM CO2 SENSOR INSTALLATION COMPATIBILITY GUIDE



Senva CO2R room CO2 sensors are designed for high performance in a low profile, architectural package. To achieve the smallest size and best appearance, part of the sensor must be recessed into the wall. Some planning is necessary to select a compatible electrical junction box, adapter plate, or low-voltage bracket to properly install the CO2R sensor.

### MINIMUM OPENING SIZE

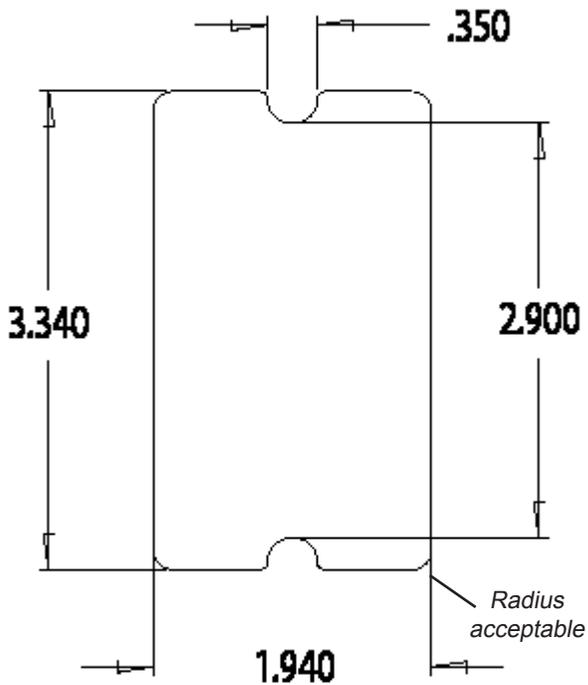

### RECOMMENDED BRACKET



### COMPATIBLE

*Adequate opening size. Narrow screw tabs.*




## SENA TRIM RING REQUIRED FOR COMPATIBILITY

*Opening too small or screw tabs too large.*



*Fits, but not completely flush  
Fully compatible if reversed*

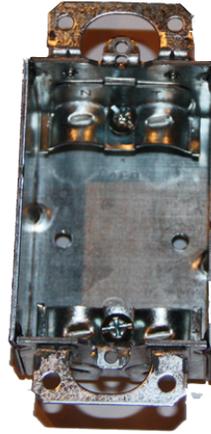

*(Residential, non-commercial)*

## SENA TRIM RING

COMPATIBLE WITH ALL STANDARD BOXES AND BRACKETS - ALSO SUITABLE FOR SURFACE MOUNTING  
AVAILABLE IN ALL ROOM SENSOR COLOR OPTIONS

Install trim ring between sensor and wall. Fasten with 1-1/2" long #6-32 flat head machine screws.

