

# Application Note

## Setting decimal point on RD display



6/28/2016

This application note describes how enable and set your decimal point on single and dual RD display units using the jumper settings. And identifies the SPAN and ZERO potentiometers to set your scale.

Instructions for setting zero and span readings:

1. Press button to display ZERO (reading at 0 volts)
2. Adjust ZERO potentiometer to desired zero reading.
3. Press button again to display SPAN (reading at 10 volts)
4. Adjust SPAN potentiometer to desired span reading.
5. Press button again to display reading

## IDENTIFY LOCATION OF JUMPERS

View the illustration and pictures to become familiar with where to find the jumpers and what each setting does when selected.

